



# Tiger STORE

## Tiger Store 2.9 Administration Guide

June 7, 2019

This publication, or parts thereof, may not be reproduced in any form, by any method, for any purpose.

TIGER TECHNOLOGY MAKES NO WARRANTY, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THESE MATERIALS AND MAKES SUCH MATERIALS AVAILABLE SOLELY ON AN “AS-IS” BASIS.

IN NO EVENT SHALL TIGER TECHNOLOGY BE LIABLE TO ANYONE FOR SPECIAL, COLLATERAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING OUT OF PURCHASE OR USE OF THESE MATERIALS. THE SOLE AND EXCLUSIVE LIABILITY TO TIGER TECHNOLOGY, REGARDLESS OF THE FORM OF ACTION, SHALL NOT EXCEED THE PURCHASE PRICE OF THE MATERIALS DESCRIBED HEREIN.

Tiger Technology reserves the right to revise and improve its products as it sees fit. This publication describes the state of this product at the time of its publication, and may not reflect the product at all times in the future.

#### THIRD-PARTY TRADEMARKS

All other brand names, product names, or trademarks belong to their respective holders.

Title: Tiger Store Administration Guide  
Software version: Tiger Store 2.9  
Date: June 7, 2019

## Manual Revision and Control

### Revision Record

Date	Description	Page	Version
19 Nov. 2017	Initial Draft		2.8
29 Jan. 2018	Steps for enabling Tiger Bridge data replication on S3/S3-compatible object storage updated with step for specifying the object storage provider.		2.8.1
08 June 2018	Steps for activating a Tiger Store license using a software-protection dongle added.	26	2.8.1
02 Nov. 2018	High-availability add-on requirements updated with requirement for cluster nodes' name.	14	2.8.1

## Revision Record

Date	Description	Page	Version
27 Mar. 2019	Tiger Bridge Integration chapter updated with steps about installing and using the Tiger Bridge Configuration and Tiger Bridge Tape Management from a remote computer and steps about resolving conflicts in the Tiger Bridge configuration on high-availability cluster.		2.9
27 Mar. 2019	Added support for Microsoft Server 2019.	13	2.9
06 June 2019	A storage server running Microsoft Windows® 7/Server 2008 R2, Windows® 8/Server 2012 must run Windows PowerShell 4.0 or above and the respective .NET framework supporting it.	13	2.9



# toc

## Table of Contents

<b>1</b>	<b>Introducing Tiger Store</b>	<b>9</b>
	The Tiger Store Workflow . . . . .	10
	Concepts Used Throughout the Guide . . . . .	11
	Data on the Shared Volumes . . . . .	13
	Storage Server System Requirements . . . . .	13
	iSCSI Requirements . . . . .	14
	High Availability Add-on Requirements . . . . .	14
	Storage Requirements . . . . .	15
<b>2</b>	<b>Getting Started with Tiger Store</b>	<b>17</b>
	Install Tiger Store . . . . .	18
	Access the Web Interface of Tiger Store . . . . .	21
	Change the Password for the Web Interface . . . . .	23
	Tiger Store Activation . . . . .	23
	Activate Tiger Store . . . . .	23
	Uninstall Tiger Store . . . . .	27
	Deactivate Tiger Store . . . . .	27
	Enable File Security in the Tiger Store Network . . . . .	27
	Initial Setup of the Appliance . . . . .	28
	Configure Appliance Identification and Connectivity . . . . .	29
	Configure the IP Addresses of the Appliance . . . . .	30
	Change the Name of The Appliance . . . . .	33
	Specify The Time and Date Settings of the Appliance . . . . .	34
	Select The Network Environment of Tiger Store . . . . .	35
<b>3</b>	<b>Smart Storage Pooling</b>	<b>37</b>
	Enable/Disable Smart Storage Pooling . . . . .	38
	Data Distribution within the Storage Pool . . . . .	39
	Files and Folders Ambiguity . . . . .	41
	Resolve Ambiguities . . . . .	42

<b>4</b>	<b>Manage the Tiger Store Storage</b>	<b>45</b>
	View Storage Information . . . . .	47
	View Shared Volumes Details . . . . .	47
	View All Volumes Details . . . . .	47
	Viewing Disks Details . . . . .	48
	View Storage Chassis Details . . . . .	48
	Share or Unshare Volumes . . . . .	49
	Make a Volume Offline . . . . .	51
	Set Volume Mount Location (Windows Only) . . . . .	51
	Create New Volume . . . . .	53
	Create New Volume (Software-only version) . . . . .	53
	Create New Volume on a Tiger Store Appliance . . . . .	55
	Manage RAID . . . . .	60
	Manage Dynamic Disks Connected to the Appliance . . . . .	64
	Rename a Tiger Store Volume . . . . .	65
	Storage Maintenance . . . . .	67
	Check and Repair The File System . . . . .	67
	Volume Defragmentation . . . . .	67
	Manually Defragment a Tiger Store Volume . . . . .	68
	Share a Volume as a SMB/CIFS Share . . . . .	69
<b>5</b>	<b>Manage Tiger Clients</b>	<b>71</b>
	View Tiger Clients Information and Connection Status . . . . .	72
	Connect/Disconnect a Tiger Client . . . . .	73
	Specify the Allowed Volumes per Tiger Client . . . . .	74
	Restrict Tiger Clients from Manually Disconnecting. . . . .	75
	View Traffic Information . . . . .	76
<b>6</b>	<b>Tiger Bridge Integration</b>	<b>79</b>
	Download and Install Tiger Bridge Configuration . . . . .	80
	Download and Install Tiger Bridge Tape Management. . . . .	82
	Manage Data in The Volume Browser . . . . .	84
	Re-scanning Replicated Data . . . . .	87
	Tiger Bridge on a Storage Server with High Availability . . . . .	88
<b>7</b>	<b>Manage High Availability</b>	<b>91</b>
	Monitor Server Nodes Synchronization . . . . .	93
	Resolve Conflicting Settings in Node View. . . . .	93

<b>8</b>	<b>System Maintenance</b>	<b>95</b>
	Tiger Store Reboot Options . . . . .	96
	Enable/Disable Remote Access to the Appliance. . . . .	97
	Firmware Update of the Appliance . . . . .	98
	Back Up/Restore the Tiger Store Configuration . . . . .	101
	Configure E-mail Notifications . . . . .	103
	View Event Reports . . . . .	104

## Table of Contents

# 1

## **Introducing Tiger Store**

<i>The Tiger Store Workflow . . . . .</i>	<i>10</i>
<i>Concepts Used Throughout the Guide . . . . .</i>	<i>11</i>
<i>Data on the Shared Volumes . . . . .</i>	<i>13</i>
<i>Storage Server System Requirements . . . . .</i>	<i>13</i>
<i>Storage Requirements . . . . .</i>	<i>15</i>

## Introducing Tiger Store

Congratulations on your purchase of Tiger Store, Tiger Technology's metadata controller for scale-out NAS and SAN platforms.

This manual will guide you in the process of setting up your Tiger Store metadata controller, administering the access to it and the volumes it manages. This guide is intended for administrators of Tiger Store.

You can find the most up-to-date version of this manual at the following address:  
<https://www.tiger-technology.com/software/tiger-store/docs>

## The Tiger Store Workflow

With the help of Tiger Store you can achieve a true SAN workflow, providing multiple Windows, Apple Mac and Linux computers with concurrent access to NTFS shared volumes. For the purpose, the computer running Tiger Store must be connected directly or through a switch to the shared storage through 8/16G FC (for FC storage), 1/10GbE (for iSCSI storage) or using SAS connection.

Regardless of their connection Tiger Clients gain block-level access to each shared volumes. Tiger Clients can mount the shared volumes as:

- SAN clients - using FC or GbE connection to the storage.
- LAN clients - using GbE connection to the storage server.

To prevent data corruption when multiple computers access the same file system, Tiger Store acts as a metadata controller that processes requests, coming from Tiger Clients through the LAN connection. Computers that do not have the Tiger Client driver cannot mount volumes managed by Tiger Store, although they might be connected to them. These computers can only mount the volumes that Tiger Store has specified that it does not manage and protect.

If you Tiger Store is part of an Active Directory domain, requests for access to the shared volumes are authenticated against the domain controller. If Tiger Store is deployed in workgroup environment every user has full access to all data on the shared volumes.

Besides acting as a metadata controller on your SAN, Tiger Store also provides you with automatic defragmentation of the shared storage volumes, storage usage and connectivity monitoring tools, etc. You can also greatly optimize your shared storage workflow using the following add-ons:

- pooling of shared volumes and presenting them as one virtual file system.
- data lifecycle management services (data replication and archiving, space reclaiming, geo synchronization) provided by Tiger Bridge.
- failover between Tiger Store server nodes for high availability.

Using the web interface you can also reformat existing volumes and create new volumes.

## Concepts Used Throughout the Guide

**Storage Server** — the computer running Tiger Store software, which acts as a SAN manager and controls access to the volumes it sees and can manage. When the high-availability add-on is activated, the storage server is comprised of two server nodes.

**Primary node** — when the high availability add-on is activated, this is the server node that is currently processing requests from Tiger Clients and is managing the volumes. The primary/secondary node division is only nominal and depends solely on which server node takes over the leading role first.

**Secondary node** — when the high availability add-on is enabled, this the server node that is currently in standby mode. In case the primary node fails or is shut down for maintenance, the secondary node takes over its role and starts processing requests for access to the shared volumes i.e. becomes primary node. The primary/secondary division node is only nominal and depends solely on which server node takes over the leading role first.

**Failover** — the process of transferring the metadata controller role from one server node to the other. As long as the high availability add-on is activated and set up, the failover between server nodes is automatic and ensures constant access to the shared volumes. In most cases the failover is transparent - the second server node takes over the metadata controller role absolutely transparently to all running applications and they can continue working with any open files after the failover takes place. During the failover process requests for access to the shared volume(s) coming from Tiger Clients are not rejected but just delayed till the other server node takes over the metadata controller role.

**Tiger Client** — each computer running the Tiger Client software, which can mount the shared volume(s). You can install the Tiger Client software on as many computers as you like. Each Tiger Client computer can share the volumes it has mounted or folders on them to LAN clients on the network as SMB/CIFS shares.

**SAN Client** — a Tiger Client computer that is connected to the shared storage directly or through a switch using FC, network connection (for iSCSI storage) or using a SAS connection.

**LAN client** — a Tiger Client computer that mounts the shared volumes using LAN connection to the storage server. In contrast to computers on the LAN that do not have the Tiger Client software installed and access only LAN shares of the shared storage, LAN clients mount the volumes and gain block-level access to them.

**Shared volume** — a volume managed by Tiger Store, which all connected Tiger Clients can mount and work with, in contrast to computers that have access to the volume but do not have the Tiger Client software installed.

**Private volume** — a volume managed by Tiger Store, which is accessible only to the storage server, usually for performing maintenance operations. Tiger Clients and computers without the Tiger Client software installed cannot mount and work with private volumes.

**Offline volume** — a volume that is not managed and protected by Tiger Store and that can be mounted by any computer that has access to it. Tiger Store cannot prevent data corruption on offline volumes, when more than one computer accesses them.

**SAN to LAN failover** — In case there is a failure of the FC HBA or FC cable (or a network port or cable for iSCSI SAN) on a Tiger Client, the SAN to LAN failover mechanism lets this computer reconnect to the shared volumes over the Ethernet and thus it can continue working with the volumes although with decreased performance. For the purpose the Tiger Client computer should disconnect from the storage server and then reconnect again. Once the problem is fixed, the Tiger Client should again disconnect and reconnect to the Tiger Store in order to mount the volume(s) over the SAN connection.

**Cluster view** — when the high availability add-on is activated, this is the web interface through which your Tiger Store network is administered. It represents the settings valid for the high-availability cluster, regardless of the server node currently playing the role of metadata controller. As long as both server nodes are available, changes introduced in cluster view are synchronized automatically among them.

**Node view** — when the high availability add-on is activated, this is the web interface, showing the settings valid just for a selected server node. The purpose of the node view is to allow you to resolve conflicting settings of server nodes that cannot be automatically synchronized in cluster view. You can also use it to view and control node specific settings (like Tiger Store activation, firmware version if Tiger Store runs on an appliance, etc.). Changing settings in node view must be done with caution in order not to create conflicts between the settings of both node.

**Tiger Store Administrator** — the user account with which any user can log on to Tiger Store's web interface and administer the Tiger Store network. The web interface of Tiger Store is accessible to any device with a web browser that is on the same network as the storage server.

## Data on the Shared Volumes

By default, data on the shared storage is accessible to anyone seeing the shared volumes. By adding Tiger Store in an Active Directory domain, you can utilize access permissions for data on the shared volumes. When Tiger Store is set up to operate in domain environment, the permissions that are already set on the file system are respected. You can manage the permissions from any Windows Tiger Client computer, which can mount the shared volume(s). For more details, refer to the documentation of the Windows Domain Server that controls permissions on your network.

**Important:** *Whether or not the volumes are accessed in domain environment, the SYSTEM account must always have full control.*

Tiger Store doesn't support Windows Recycle Bin on its volumes and any soft-deleted file is permanently deleted. Mac OS X Trash is supported on the shared volumes, allowing Mac OS X clients to soft-delete files and later restore them or permanently delete them by emptying the Trash. When Tiger Store operates in Active Directory domain environment, each domain user moves their soft-deleted files to their own Trash folder. In workgroup environment, as the Trash folder is created per user ID and two or more different users on different Mac OS X clients may move their soft-deleted files to the same Trash folder and empty the Trash containing the files of other users with the same ID.

## Storage Server System Requirements

**Note:** *Tiger Store appliances come with Tiger Store software pre-installed.*

To be able to play the role of a metadata controller, the computer on which you install the Tiger Store software must meet the following minimum system requirements:

- PC with 1.8-GHz 64-bit (x64) processor.
- 64-bit Microsoft Windows® 7/Server 2008 R2, Windows® 8/Server 2012/Server 2012 R2, Windows® 10/Server 2016/Server 2019.

**Important:** *Microsoft Windows® 7/Server 2008 R2 computers must run at least Service Pack 1 and have the KB3033929 security update installed. Additionally, Microsoft Windows® 7/Server 2008 R2, Windows® 8/Server 2012 computers must run Windows PowerShell 4.0 or above and the respective .NET framework supporting it (for PowerShell 4.0 this is version 4.5.1).*

- 4 GB of physical RAM at least.
- 200 MB of available hard-disk space for installation.
- Network LAN connection (1 Gb at least).
- 4Gb/8Gb/16Gb FC, 1GbE/ 10GbE or SAS adapter for connection to the storage.
- Network LAN connection (1Gb at least) for public communication.

## Introducing Tiger Store

- The following TCP ports - 80, 3000, 3001, 8555, 9120, 9121, 9122, 9123, 9124, 9125, 9126, 9127 - must not be blocked by a firewall, if any, and must not in use by any other service or application.

**Note:** By default, TCP port 80 is used for access to the web interface of Tiger Store. To assign another port for the purpose, refer to "Change the TCP Port for Access to the Web Interface" best practices topic in the latest Tiger Store release notes.

## iSCSI Requirements

Although Tiger Store is designed to work with any iSCSI initiator, it is currently certified to work with:

- Microsoft iSCSI Software Initiator
- UNH iSCSI Initiator
- Studio Network Solutions' globalSAN iSCSI initiator for OS X
- ATTO Xtend SAN iSCSI initiator

**Note:** If you use an iSCSI initiator not listed above, you can contact Tiger Technology support team with inquiry about possible support.

## High Availability Add-on Requirements

Unless you use a Tiger Store appliance with two server nodes, to deploy Tiger Store with high-availability you must install Tiger Store on two computers, which aside from meeting the above mentioned system requirements, must also be set up in the following way:

- The network LAN connection (1 Gb at least) used for public communication must be named "Public" on both nodes.
- The two nodes must be interconnected through an additional direct network connection (1 Gb at least), named "Admin" on both nodes.
- Both server nodes must have an exact IP address for the "Admin" network connection:
  - Node A - IP address: 1.2.3.4 with subnet mask 255.255.255.0
  - Node B - IP address: 1.2.3.5 with subnet mask 255.255.255.0
- Both server nodes must have identical names differing only in the suffix at the end of each node's name:
  - [cluster\_name]-A
  - [cluster\_name]-B

For example, if you want the high-availability cluster to use the name "SANSRV", in Windows rename one node to "SANSRV-A" and the other to "SANSRV-B".

**Note:** *The suffix you must add to the name of each computer is not related to the role the respective node plays in the high-availability cluster - primary or secondary node.*

## Storage Requirements

Tiger Store supports any simple or striped NTFS-formatted volume to which the storage server has Read & Write access. You can connect the computer/appliance to the shared storage via Fibre Channel (directly or using a FC switch), using SAS connection or using network connection to iSCSI storage. The storage server can also share its own internal disks, letting any computer on the same LAN gain block-level access to them.

**Important:** *If you want to use a Tiger Store appliance with iSCSI storage, you should contact the Tiger Technology support team for assistance on setting up the iSCSI initiator on the appliance for work with the storage.*

Introducing Tiger Store



# Getting Started with Tiger Store

<i>Install Tiger Store . . . . .</i>	<i>18</i>
<i>Access the Web Interface of Tiger Store . . . . .</i>	<i>21</i>
<i>Tiger Store Activation . . . . .</i>	<i>23</i>
<i>Enable File Security in the Tiger Store Network .</i>	<i>27</i>

## Install Tiger Store

**Note:** *Tiger Store comes pre-installed on all Tiger Store appliances. For steps about performing a firmware update of the appliance, refer to "Firmware Update of the Appliance" on page 98.*

You should install the Tiger Store software on the computer that will play the role of metadata controller on your Tiger Store network. Once you install the software and activate Tiger Store on the computer, all supported storage devices that the computer sees and that meet the storage requirements can be shared to Tiger Clients, preventing computers that don't run the Tiger Client software from mounting them.

Additionally, to allow client computers to download the Tiger Client software from the home page of Tiger Store's web UI, you should also install the client bundle, containing the Tiger Client installation for all supported platforms.

**Note:** *The Tiger Store installation creates the `tbox_db` user account to run maintenance tasks scheduled for it in the Tasks Scheduler of the metadata controller computer. It is important not to delete or disable neither the user account nor the tasks set to it.*


Should you decide to change the metadata controller on your Tiger Store network, you should uninstall and deactivate the Tiger Store software from the current storage server and install and activate it on the new computer that will play the role of metadata controller. For steps about uninstalling and deactivating Tiger Store, refer to "Tiger Store Activation" on page 23.

### To install Tiger Store and the client bundle on the storage server:

**Important:** *Before you install Tiger Store on the storage server, make sure that any other SAN management software is uninstalled from the system.*

1. On the selected computer, log on using an account with administrative privileges.
2. Browse for and double-click the Tiger Store installation file.

The installation begins.

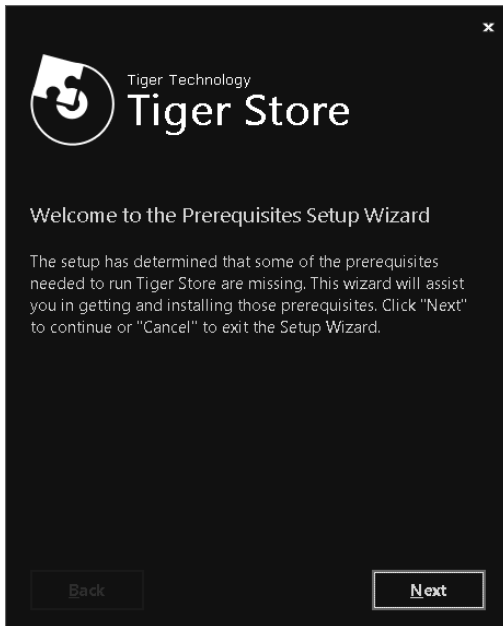


3. Click Next.

## Getting Started with Tiger Store


4. If the wizard suggests the installation of additional prerequisites, accept and click Next.



5. Select where to install the product, accept the terms of the software license agreement and click Install.

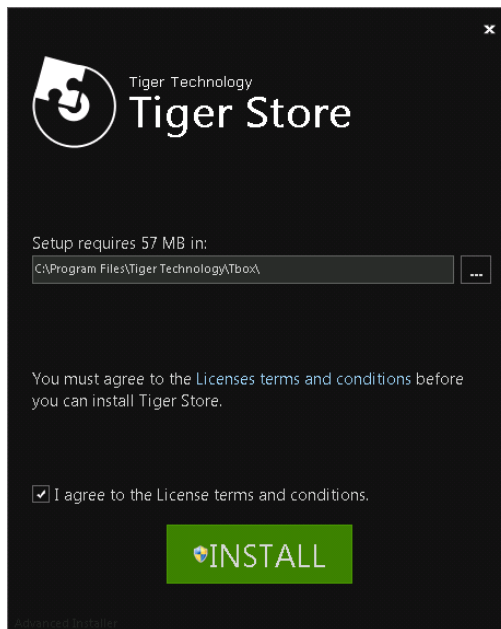

6. When the installation finishes, click Finish and select not to restart the computer, when prompted.
7. Browse for and double-click the Tiger Store clients bundle installation file.
8. When the installation starts, click Next.
9. Select where to install the clients bundle, accept the terms of the software license agreement and click Install.

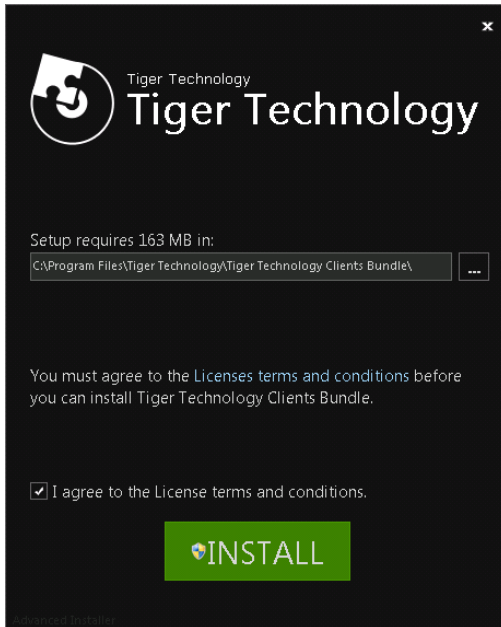

10. When the installation finishes, restart the computer.

## Access the Web Interface of Tiger Store

**Note:** By default, TCP port 80 is used for access to the web interface of Tiger Store. To assign another port for the purpose, refer to "Change the TCP Port for Access to the Web Interface" best practices topic in the latest Tiger Store release notes.

Tiger Store can be administered through its web interface, which is accessible to every device with a web browser that is on the same network as the storage server. To access it, in a web browser enter the IP address of the storage server's network port, to which your computer is connected.

By default, the web interface uses a pre-set password:  
admin

## Getting Started with Tiger Store

It is advisable to set new password for the web interface in order to prevent unauthorized access to the Tiger Store network administration. See “Change the Password for the Web Interface” on page 23.

**Note:** *Tiger Store’s web interface is accessible with most web browsers as long as JavaScript is enabled. If you experience any problems with Tiger Store’s web interface, please, contact Tiger Technology support.*

### To access the web interface from a network computer:


1. In a web browser, do one of the following:

- type the IP address of the storage server;
- type the domain name of the storage server;

**Important:** *A DNS server on the network must resolve the IP address of the storage server to its domain name.*

2. Press Enter.

The web interface of Tiger Store loads.

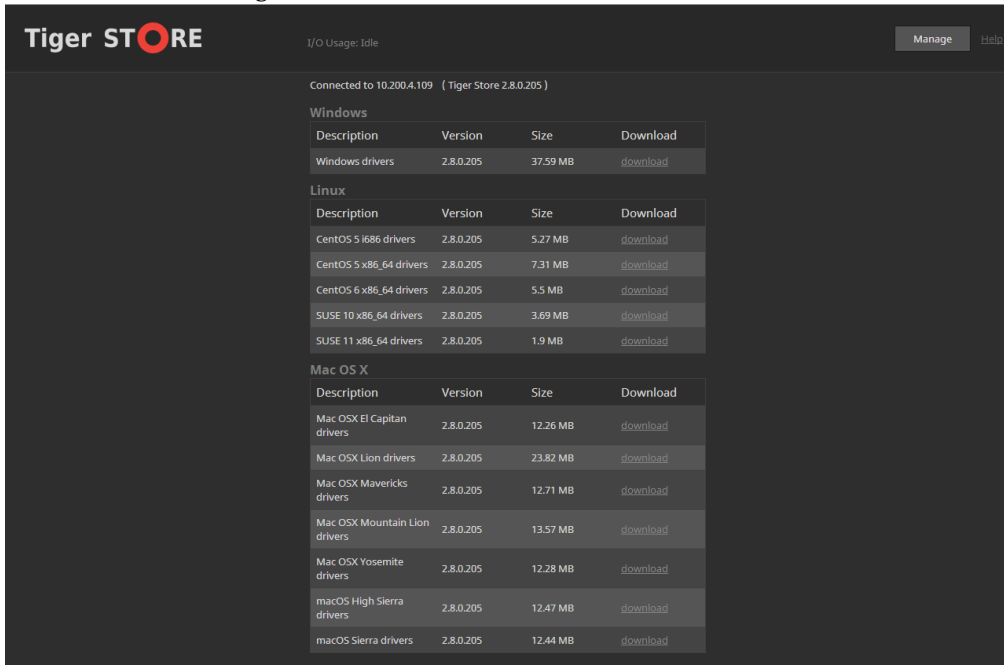

The screenshot displays the Tiger Store web interface. At the top left is the 'Tiger STORE' logo. To its right, it says 'I/O Usage: Idle'. Further right are 'Manage' and 'Help' buttons. Below this, a status bar indicates 'Connected to 10.200.4.109 (Tiger Store 2.8.0.205)'. The main content area is divided into three sections: Windows, Linux, and Mac OS X. Each section contains a table with columns for Description, Version, Size, and Download.

Windows			
Description	Version	Size	Download
Windows drivers	2.8.0.205	37.59 MB	<a href="#">download</a>

Linux			
Description	Version	Size	Download
CentOS 5 i686 drivers	2.8.0.205	5.27 MB	<a href="#">download</a>
CentOS 5 x86_64 drivers	2.8.0.205	7.31 MB	<a href="#">download</a>
CentOS 6 x86_64 drivers	2.8.0.205	5.5 MB	<a href="#">download</a>
SUSE 10 x86_64 drivers	2.8.0.205	3.69 MB	<a href="#">download</a>
SUSE 11 x86_64 drivers	2.8.0.205	1.9 MB	<a href="#">download</a>

Mac OS X			
Description	Version	Size	Download
Mac OSX El Capitan drivers	2.8.0.205	12.26 MB	<a href="#">download</a>
Mac OSX Lion drivers	2.8.0.205	23.82 MB	<a href="#">download</a>
Mac OSX Mavericks drivers	2.8.0.205	12.71 MB	<a href="#">download</a>
Mac OSX Mountain Lion drivers	2.8.0.205	13.57 MB	<a href="#">download</a>
Mac OSX Yosemite drivers	2.8.0.205	12.28 MB	<a href="#">download</a>
macOS High Sierra drivers	2.8.0.205	12.47 MB	<a href="#">download</a>
macOS Sierra drivers	2.8.0.205	12.44 MB	<a href="#">download</a>

3. Click Manage and type the password for the web interface.

## Change the Password for the Web Interface

Tiger Store's web interface is accessible after supplying a password. By default, the web interface of Tiger Store uses a predefined password:


admin

It is advisable to change the predefined password as the web interface is accessible to every computer on the same network. You can change the password for the web interface at any time.

**Note:** On Tiger Store appliances with two server nodes, to set identical password on both nodes, either change the password when both nodes are online, or assign the same password to an offline node once you turn it on, following the same steps, but in the node view of this server node.

### To change the web interface password:

1. In the left pane of the web interface, click System and then Settings.
2. In the Management Password field, enter the current password and the new password in the respective fields, and then click Set Password.

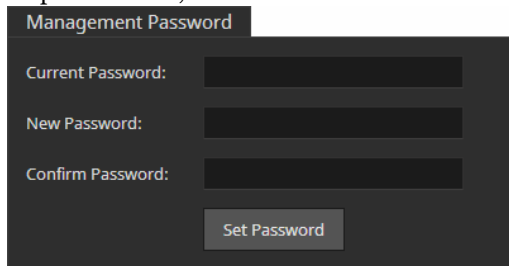

Management Password

Current Password:

New Password:

Confirm Password:

## Tiger Store Activation

### Activate Tiger Store

**Note:** Your Tiger Store license can be pre-activated on a Tiger appliance. To view the activation status of Tiger Store, refer to the steps below.

To benefit from Tiger Store you have to activate the product and any add-on licenses. Until you activate Tiger Store on the storage server, the volumes it is connected to are not protected from data corruption and cannot be shared to Tiger Clients. For activation Tiger Store makes use of a software-protection dongle.


The activation procedure consists of two parts - obtaining an activation key/license file on the licensing server and activating it in the web interface of Tiger Store.

Getting Started with Tiger Store

## To view the activation status of the storage server:

In the left menu, click System and then About.

The About page displays license information:

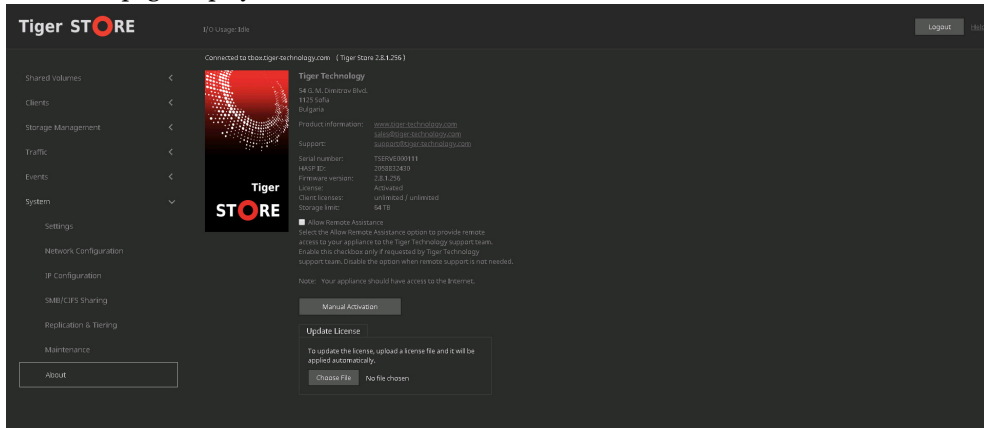

**Not present** — no license file is found.


**Valid till...** — displays the date until which the license is valid.

**Expired** — the license has expired.

**Activated** — a valid permanent license file is installed.

## To activate a Tiger Store license using a software activation key:


1. In the left menu of Tiger Store's web interface, click System and then About.

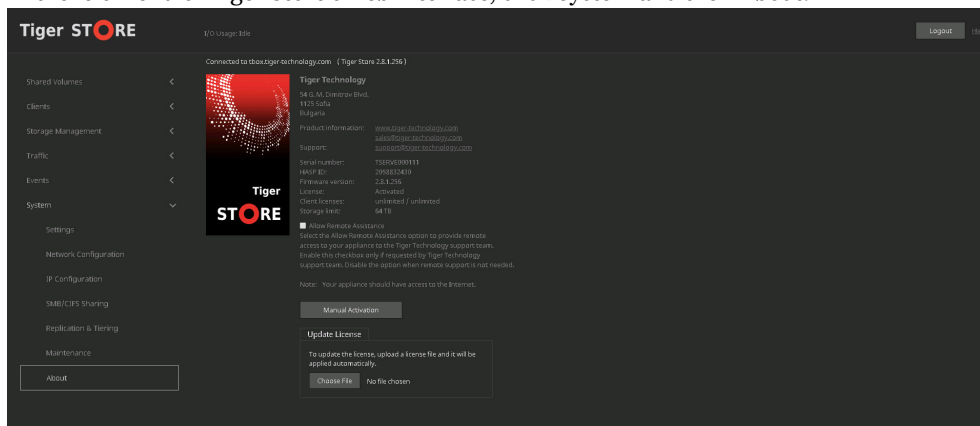

**Note:** On a storage server with high availability add-on already activated, you must access the About page of each node in Node view (HA Nodes | Manage Node). Until high availability is activated, Node view is not available in the web interface and the license must be activated on each node following these steps.

2. Click Manual Activation.

The License Activation dialog appears.

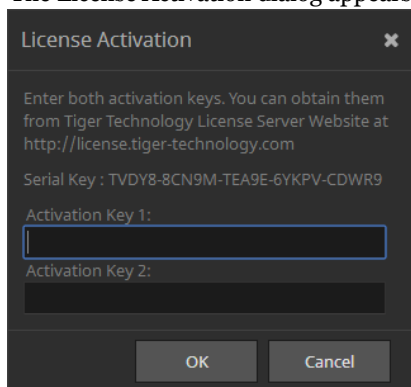

3. Copy the serial number and in a web browser go to:  
<https://license.tiger-technology.com>
4. In the home page of the licensing server, enter your order name and password in the corresponding fields, and click Log in.

**Note:** If you enter the Tiger Technology licensing site for the first time, you should fill the registration form to continue.

## Getting Started with Tiger Store

**Important:** *The order name and the password are case sensitive.*

The server displays information about your account.

5. In the Licensing Server menu, click Activate License.
6. In Activate License, paste the serial number for your copy of Tiger Store and click Generate Activation Key.

The licensing server generates two activation keys.

7. In the License Activation dialog in the Tiger Store web interface, paste the keys generated for your copy of Tiger Store, and click OK.

The About page displays the activation status of the metadata controller and the type of license used.

### To activate a Tiger Store license using a software-protection dongle:

1. In a web browser go to <https://license.tiger-technology.com>.
2. In the home page of the licensing server, enter your order name and password in the corresponding fields, and click Log in.


**Note:** *If you're entering the Tiger Technology licensing site for the first time, you should fill the registration form to continue.*

**Important:** *The order name and the password are case sensitive.*

3. Next to the dongle name in the list, click “Download lic file”.

**Tip:** *The dongle name is its number, printed on the dongle itself.*

4. In the left menu of Tiger Store's web interface, click System and then About.

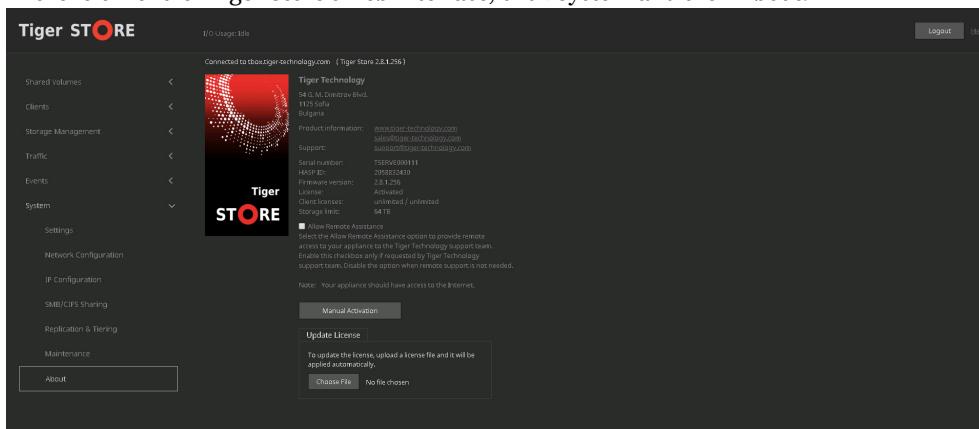

**Note:** *On a storage server with high availability add-on activated, you must access the About page of each node in Node view (HA Nodes | Manage Node).*

5. Under Update License, click “Choose File”.
6. In the dialog, which opens, browse for and double-click the license file downloaded from the Tiger Technology licensing server and then click Continue, when prompted.

## Uninstall Tiger Store

**Note:** *You cannot uninstall the product from a Tiger Store appliance.*

You can uninstall the software-only version of the product from the storage server at any time, keeping in mind that when you install it again on the same computer, you will have to activate it anew.

When you need to assign another computer as a metadata controller, you need to uninstall and deactivate Tiger Store from the current storage server in order to use it on another computer. For steps, refer to “Deactivate Tiger Store” on page 27.

### To uninstall Tiger Store:

1. Display the Control Panel.
2. Double-click Programs and Features.
3. Right-click Tiger Store and select Uninstall.
4. Confirm that you want to uninstall Tiger Store.
5. When prompted, restart the computer.

## Deactivate Tiger Store

**Note:** *You cannot deactivate the product from a Tiger Store appliance.*

When you want to transfer your licenses to another machine, you have to obtain new activation key (as the activation key is granted per machine) and return the old one by deactivating your licenses for this computer. After deactivating Tiger Store on the current storage server, you will not be able to activate it again with the same key even if you reinstall Tiger Store.

Currently, Tiger Store doesn’t provide interface for deactivating the product. For the purpose, you need to contact Tiger Technology support for assistance on transferring your license to another computer.

## Enable File Security in the Tiger Store Network

**Note:** *There’s no need to enable file security on a Tiger Store appliance, if you have specified the deployment environment of the appliance during the initial setup.*

## Getting Started with Tiger Store

By default, data on the shared storage is accessible to anyone seeing the shared volumes. If your Tiger Store storage server is in an Active Directory domain, you can utilize access permissions for data on the shared volumes. To enable support for file security on the shared volumes, you should create a new string value in the Tiger Store registry on the storage server.

**Important:** *Note that when the metadata controller is no longer part of an Active Directory domain, you must disable the support for file security on the volumes it shares to Tiger Clients.*

### To enable/disable support for file security on the shared volumes:

1. On the Tiger Store computer, start the Registry Editor.  
**Tip:** *To start Registry Editor, on the Start menu click Run and in the dialog type regedit.*
2. Navigate to:  
HKEY\_LOCAL\_MACHINE\SOFTWARE\Tiger Technology\tbody\tbodymaster\settings\driver
3. Right-click in the right pane and select New | String Value.
4. Rename the new REG\_SZ value to:  
enable\_file\_security
5. Right-click enable\_file\_security value and select Modify.
6. Do one of the following:
  - To enable support for file security on the shared volumes, in Value Data enter 1 and click OK.
  - To disable support for file security on the shared volumes, in Value Data enter 0 and click OK.
7. Restart the Tiger Store computer.

## Initial Setup of the Appliance

Before you begin work with the product on a Tiger Store appliance, you need to perform its initial setup. The initial setup includes the following procedures:

- Configure the IP address of each network port of the appliance (see “Configure the IP Addresses of the Appliance” on page 30).
- Change the name of the appliance (see “Change the Name of The Appliance” on page 33).
- Specify the time and date settings of the appliance (see “Specify The Time and Date Settings of the Appliance” on page 34).
- Set the environment in which Tiger Store operates - workgroup or Active Directory domain (see “Select The Network Environment of Tiger Store” on page 35).

**Important:** *If your Tiger Store appliance features two server nodes, in order to synchronize the settings specified during the initial setup between the server nodes, it is advisable both of them to be turned on.*

Once you go through the initial setup, Tiger Store can operate normally without having to change any of its settings. Later on you can change any of the settings that you have specified during the initial setup from any computer that has access to Tiger Store's web interface.

You can perform the initial setup of the appliance in the web interface of Tiger Store.

## Configure Appliance Identification and Connectivity

Each Tiger Store appliance is identified in the network by IP address and name (by default, this is the serial number of the appliance).

The appliance must have an IP address for each network port through which it communicates with Tiger Clients (directly or via an Ethernet switch). The IP address of each network port must be on the same LAN as the Tiger Client that will communicate with the appliance through this port. For more information, refer to “Configure the IP Addresses of the Appliance” on page 30.

Tiger Store supports teaming of the ports of each network card. If you choose to team the ports of a network card, all its ports will be accessible through just one IP address. To benefit from ports teaming, you must use an Ethernet switch, which supports Link Aggregation Control Protocol (IEEE 802.1ax, LACP) and is set up for teaming.

Additionally, Tiger Store allows you to assign two or more IP addresses to the same network card, thus making it accessible from networks on different subnets.

Changing the name of the appliance can be useful to more easily identify your appliance on the network or, if you deploy more than one Tiger Store appliances in your organization, to facilitate you in distinguishing them. For more information, refer to “Change the Name of The Appliance” on page 33.

### Team/Unteam Network Ports


To facilitate you with assigning IP addresses to the network ports of the appliance, Tiger Store allows you to team the ports of a single network card. This way all ports of a network card will be accessible through a single IP address.

**Important:** *To benefit from ports teaming, you must use an Ethernet switch, which supports Link Aggregation Control Protocol (IEEE 802.1ax, LACP) and is set up for teaming.*

You can unteam the ports of a network card at any time. When you unteam the ports of a network card, they are automatically assigned the IP addresses they have had before teaming them - either the default ones assigned by the appliance, or the ones you have manually specified. Should you decide to team the ports again, you will have to specify the IP address manually again.


### To team/unteam the ports of a network card:

1. In the left pane of Tiger Store's web interface, click System and then Network Configuration.  
The page lists all detected network cards, except the Public port and the Admin port, if such is predefined.
2. In the tile of a network card, do one of the following:
  - Select Use as a team, and then click Apply.

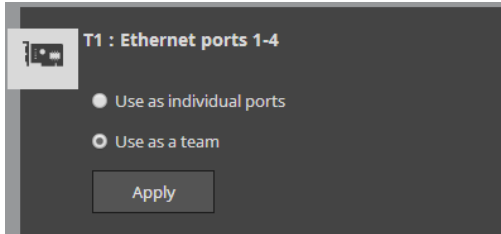

The teamed ports are listed on the IP Configuration page, where you can assign an IP address to them.

- Select “Use as individual ports”, and then click Apply.

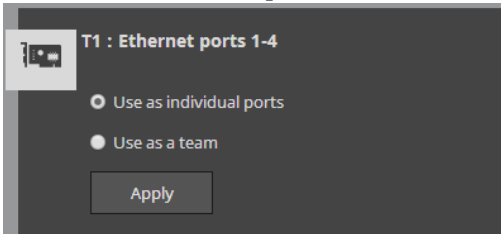

The ports are listed on the IP Configuration page individually with their previous IP addresses (the ones you have manually specified, or, if none has been specified, the default ones).

## Configure the IP Addresses of the Appliance

Your Tiger Store appliance can have any of the following network ports:

**Public port** — 1GbE port designed to connect the appliance to your corporate network and provide it with access to shared resources and the Internet and also used for metadata exchange between the appliance and Fibre Channel Tiger Clients.

**1/10GbE ports** — designed to provide for both data and metadata traffic of Tiger Clients connected to the appliance via 10GbE connection.

You must set an IP address for each network port through which the appliance is connected to Tiger Clients (directly or via an Ethernet switch) - the Public port and all other available network ports

or port teams. The IP address you assign to each network port must be on the same subnet as the Tiger Client that will communicate with the appliance through this port. If computers in your facility are already interconnected in a LAN, you can simply assign an IP address to the Public port in the same subnet.

When a LAN client can reach the appliance both through the Public port and another faster port, to ensure that the Tiger Client always mounts the shared volumes over the faster connection, it is advisable to set the IP addresses of the faster ports of both the appliance and the Tiger Client to be on a separate subnet of the LAN used by the Public port. For more information refer to the “Assigning IP Addresses to Network Ports” best practices topic in the latest version of the product release notes.

On Tiger Store appliance with high availability activated, to guarantee the failover between the two server nodes, the network ports/port teams with identical names on both nodes (the Public ports, for example) must be on the same subnet. To facilitate you in this task, Tiger Store attempts to automatically synchronize the IP settings of the two nodes, when you specify these settings in cluster view of the web UI. Thus, when you set an IP address of the Public port, for example, Tiger Store assigns it to the Public port of the current primary node and automatically assigns a consecutive IP address in the same subnet to the Public port of the secondary node. In case the consecutive IP address is already in use or the secondary node is offline, the automatic synchronization fails and you will have to manually specify the IP addresses of the secondary node’s network ports in node view. You can ensure that the IP settings of both nodes are synchronized in the HA Nodes page of the web UI. For more information, refer to “Manage High Availability” on page 91.

**Important:** *Whenever you introduce changes to the IP settings of Tiger Store, on all Tiger Clients you may have to re-add the appliance to the storage servers list, in order to ensure that they can connect to it.*

## IP Addresses Limitations

When assigning IP addresses to the network ports of Tiger Store, make sure that you avoid the following IP addresses as they are either link-local addresses or are in use by Tiger Store services:

- Link-local addresses in the range 169.254.0.0 - 169.254.255.255
- IPMI addresses in the range 1.1.1.0 - 1.1.1.255

### To assign an IP address to a network port:

1. In the left pane of Tiger Store’s web interface, click System and then IP Configuration.  
The IP Configuration page loads. It lists the tiles of the Public port and all individual and/or teamed network ports.

## Getting Started with Tiger Store

2. In the tile of the respective port or team, enter the IP address and subnet mask.

The screenshot shows a network configuration window titled 'Public'. It contains the following fields and values:

- IP Address: 10 . 200 . 6 . 37
- Subnet: 255 . 255 . 0 . 0
- Router: 10 . 200 . 0 . 1
- DNS Server: 10 . 200 . 200 . 14

There are also '+' and '-' buttons for adding or removing additional IP addresses, and an 'Apply' button at the bottom.

**Note:** As the Public port is also used for connection to the Internet, you can also specify router and DNS server details.

3. (optional, to assign additional IP address) Click the + button and add an additional IP address and subnet mask for the same network port.

**Tip:** You can add as many IP addresses to the same port, by clicking the "+" button. To remove one of the IP addresses, simply click "-" next to it.

4. Click Apply.

For appliances with two server nodes, as long as the secondary node is also online, Tiger Store attempts to automatically synchronize the IP settings of both nodes and assign consecutive IP addresses to the identical network ports of the secondary node. In case the secondary node is offline or Tiger Store is unable to assign consecutive IP addresses to the ports of the secondary node, to ensure the high availability of the appliance, you must manually configure the IP addresses of one or both nodes in the node view of the respective node.

### To assign an IP address to a network port in node view:

**Note:** To configure the IP address of a network port, the port adapter must be online.

1. In the left pane of cluster view, click HA Nodes.
2. In the tile of the server node whose IP settings you want to configure, click Manage Node.  
The node view for the selected server node opens in a new tab/window of your web browser.

- Click Manage and then enter the password for the web interface.

**Tip:** If you have changed the password for the cluster view of the web interface, while this node has been online - enter the new password. In other cases enter the default password - admin.

- In the left menu of the node view, click System and then IP Configuration.
- In the tile of the respective port or team, enter the IP address and subnet mask.

**Public**

IP Address: 10 . 200 . 6 . 37

Subnet: 255 . 255 . 0 . 0

IP Address: . . . .

Subnet: . . . .

Router: 10 . 200 . 0 . 1

DNS Server: 10 . 200 . 200 . 14

Apply

**Note:** As the Public port is also used for connection to the Internet, you can also specify router and DNS server details.

- Click Apply.

Tiger Store applies the new settings only to the selected node.

**Tip:** To make sure that the IP settings of both nodes are synchronized, go to the HA Nodes page of the web UI (see "Manage High Availability" on page 91).

## Change the Name of The Appliance


By default, each Tiger Store appliance is shipped to you with a pre-configured name - the appliance's serial number, printed at the back of the chassis and visible in the About page of the web UI. On appliances with two server nodes, the name of each node is comprised of the name of the appliance plus an automatically added suffix. Tiger Store takes care to automatically synchronize the name setting between the nodes in order to ensure failover can take place. Thus, when you change the name of the appliance on one node, as long as the other node is also online, its name is updated (but with different suffix) as well. When you change the name of the appliance on one node, while the other node is offline (or not available), it is advisable to manually synchronize the name setting across nodes when both of them are online.

**Note:** If you rename a Tiger Store appliance after client computers have already added it to their storage servers list, you may have to manually edit the appliance's name on client computers (refer to the "Tiger Client User's Guide").

## To rename the appliance:

**Important:** *To rename the appliance you will have to reboot it.*

1. In the left pane of Tiger Store's web interface, click System and then Settings.
2. In Appliance Name, enter a new name of the appliance and click Apply.

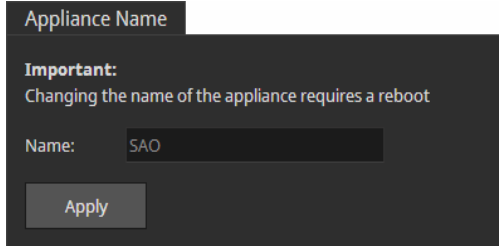A screenshot of the 'Appliance Name' settings page. At the top, the title 'Appliance Name' is in a dark box. Below it, an 'Important:' notice states 'Changing the name of the appliance requires a reboot'. There is a text input field labeled 'Name:' containing the text 'SAO'. At the bottom, there is a grey 'Apply' button.


3. Confirm that you want to change the name of the appliance when prompted.
4. In the left pane, select System and then Maintenance.
5. In System Reset drop down box, select “Full system reboot” and then click Full system reboot.

## Specify The Time and Date Settings of the Appliance

To ensure the normal work of Tiger Store, you should set the time and date of the appliance as soon as you turn it on. It is advisable to use the same date and time settings on all computers on your Tiger Store network.

### To specify the time and date settings of the appliance:

1. In the left pane of the web interface, click System and then Settings.
2. In Date and Time, select the desired date, time zone and specify the exact time.

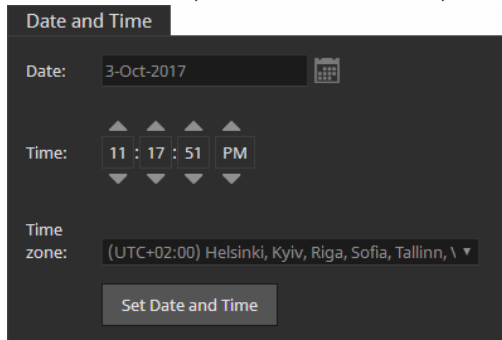A screenshot of the 'Date and Time' settings page. The title 'Date and Time' is in a dark box. Below it, there is a 'Date:' field showing '3-Oct-2017' with a calendar icon. Underneath is a 'Time:' field showing '11 : 17 : 51 PM' with up/down arrows for each part. Below that is a 'Time zone:' dropdown menu showing '(UTC+02:00) Helsinki, Kyiv, Riga, Sofia, Tallinn, \'. At the bottom, there is a grey 'Set Date and Time' button.

3. Click Set Date and Time.

## Select The Network Environment of Tiger Store


By default, Tiger Store is configured to operate in workgroup environment - the appliance is pre-configured as a member of the WORKGROUP workgroup and any user that can connect to it, has access to all resources on the shared volumes. If your appliance is on the same network as an Active Directory domain controller, you can add the appliance to the domain and benefit from access permissions to files and folders for domain users. For the purpose, you should simply specify the domain name and authenticate as a user that has permissions to join computers to the selected Active Directory domain.

You can switch the network environment in which Tiger Store is deployed from workgroup to domain and vice versa at any time.

**Important:** *Setting the network environment of Tiger Store requires that you reboot the appliance.*

### To set domain environment for Tiger Store:

1. In the left pane of the web interface, click System and then Settings.
2. In Domain Info, click Domain.

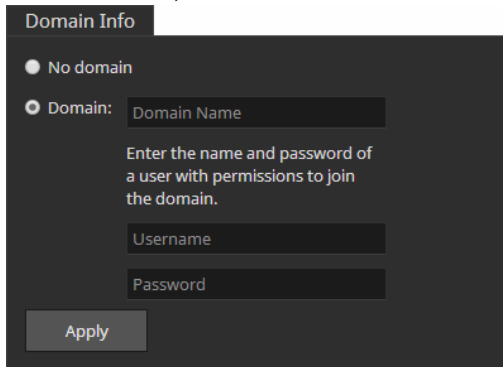


The screenshot shows the 'Domain Info' section of a web interface. It has a dark theme. At the top, 'Domain Info' is written in a light box. Below it, there are two radio button options: 'No domain' (which is unselected) and 'Domain:' (which is selected). To the right of 'Domain:', there is a text input field labeled 'Domain Name'. Below this, there is a paragraph of text: 'Enter the name and password of a user with permissions to join the domain.' Underneath this text are two more text input fields, one labeled 'Username' and one labeled 'Password'. At the bottom left of the form is a button labeled 'Apply'.

3. In the respective fields, enter the domain name and the user name and password of a user that can join computers to the specified Active Directory domain.
4. Click Apply.
5. In the left pane, select System and then Maintenance.
6. In System Reset drop down box, select Full System Reboot and then click Full system reboot. When the appliance is online again, accesses to files/folders on the shared volumes are authenticated against the specified Active Directory domain.

**To set workgroup environment for Tiger Store:**

1. In the left pane of the web interface, click System and then Settings.
2. In Domain Info, click No domain.

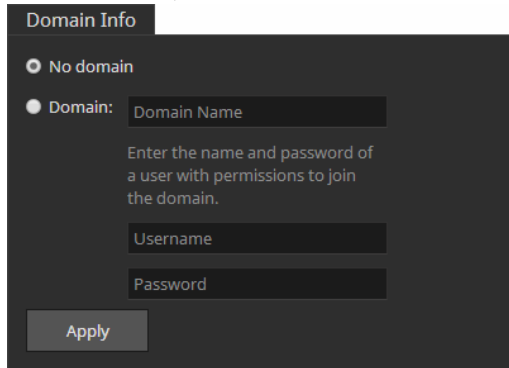

The screenshot shows the 'Domain Info' settings page. At the top, there is a tab labeled 'Domain Info'. Below it, there are two radio button options: 'No domain' (which is selected) and 'Domain:'. To the right of the 'Domain:' radio button is a text input field labeled 'Domain Name'. Below this input field, there is a text instruction: 'Enter the name and password of a user with permissions to join the domain.' Underneath this instruction are two more text input fields, one labeled 'Username' and one labeled 'Password'. At the bottom left of the form is a button labeled 'Apply'.

The domain controller may require that you authenticate yourself as a user authorized to remove computers from the domain.

3. Click Apply.
4. In the left pane, select System and then Maintenance.
5. In System Reset drop down box, select Full System Reboot and then click Full system reboot.  
When the appliance is online again, all users that can mount the shared volumes have unrestricted access to all files/folders on it.



## Smart Storage Pooling

<i>Enable/Disable Smart Storage Pooling . . . . .</i>	<i>38</i>
<i>Data Distribution within the Storage Pool . . . . .</i>	<i>39</i>
<i>Files and Folders Ambiguity . . . . .</i>	<i>41</i>

## Smart Storage Pooling

**Note:** *Smart storage pooling is not supported on Linux Tiger Clients and they always mount the individual volumes only.*

The smart storage pooling add-on allows you to unite the volumes shared by the storage server into a single virtual volume - the storage pool - that Windows and Apple Mac Tiger Clients can access through a universal mount point. The pool size equals the sizes of all volumes that comprise it and presents their existing folder structures as one merged folder structure. Volumes can contain data prior to uniting them in a storage pool and it will remain visible in the pool. Similarly, when the pool is disbanded (by disabling smart storage pooling), all data remain on the respective Tiger Store volume and is accessible through the volume itself.

When enabling smart storage pooling on volumes that already contain data, it is possible ambiguity of file objects to occur i.e. files/folders with one and the same name to exist in exactly the same location on two or more volumes in the pool. For more details, refer to “Files and Folders Ambiguity” on page 41.

By default, when writing new data on the pool, Tiger Store tries to store it on the same file system on which the containing folder is stored. In case you write new data on the root of the storage pool, Tiger Store creates it in the root of the shared volume that has more free space. You can change this default behaviour, by applying a data distribution policy. For more details, see “Data Distribution within the Storage Pool” on page 39.

To enable smart storage pooling, there must be at least two shared volumes available. While smart storage pooling is enabled, you can set any volume in the pool to Private or Offline and clients will continue to mount the pool as long as at least one of the volumes in it is shared, but will not be able to access data stored on volumes that are not shared.

You can enable and disable smart storage pooling at any time as long as Tiger Bridge’s replication is not currently enabled. You cannot enable smart storage pooling if workspace quotas are enabled in Tiger Spaces. Mac OS X and Windows Tiger Clients will detect that they should mount either the individual volumes or the pool, only on the next attempt to mount the Tiger Store storage.


Options you might want to configure after enabling/disabling smart storage pooling include volume mount location for the pool, Tiger Bridge data replication and space reclaiming.

## Enable/Disable Smart Storage Pooling

### To enable/disable smart storage pooling:

**Note:** *You cannot change smart storage pooling settings, while Tiger Bridge data replication is enabled.*

1. In the left pane of the web interface, click Shared Volumes.
2. In Smart Storage Pooling, do one of the following:

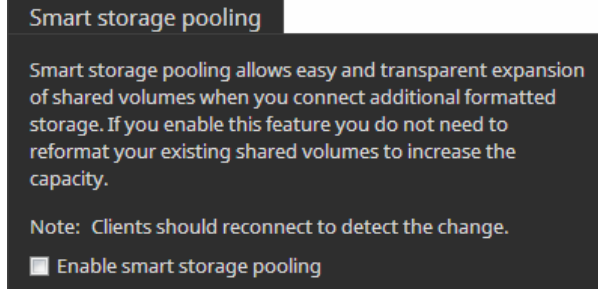

- Select the “Enable smart storage pooling” check box, to unite all shared volumes in a pool.

**Note:** *You cannot enable smart storage pooling if quotas are enabled in Tiger Spaces.*

- Clear the “Enable smart storage pooling” check box, to disband the volume pool and let Tiger Clients access the individual volumes instead.

## Data Distribution within the Storage Pool

By default, when writing new data on the pool, Tiger Store tries to store it on the same file system on which the containing folder is stored. In case you write new data in the root of the storage pool, Tiger Store creates it in the root of the volume that has more free space.

You can change this default behaviour for newly created folders, by applying a data distribution policy to a folder (the root of the volume pool or any folder in the pool):

**Balance by size** — creates the folder on the volume in the storage pool, which has more free space.

**Balance by count** — creates the folder on the volume in the storage pool, which has the minimal number of folder entries.

**Note:** *Files are always stored on the volume of their parent folder regardless of the policy you apply.*

To apply one or the other of the above policies, you should create a file with the name of the policy in the root of the storage pool or in any of its subfolders, thus instructing Tiger Store to calculate either the free space or the number of folders on each volume in the pool and only after that to create the new folder on the volume that matches the policy. Should the policy instruct Tiger Store to create the new folder not on the volume containing the parent folder, but on another volume, Tiger Store replicates the entire folder structure from the root of the volume pool to the newly created folder so that the path used to access it would be the same as if accessing it from the parent

## Smart Storage Pooling

folder. For example, if on one shared volume you have a folder “Projects” that contains three subfolders - “May”, “June” and “July”, and you set the creation behaviour of folder “June” to use the Balance by count policy, when you create a new folder “Drafts” in the “June” folder, and it needs to be stored on another volume, because there are less file objects on it, Tiger Store will create in the root of the other volume, a folder “Projects” containing just the folder “June” with a subfolder “Drafts”. The policy is valid just for the folder containing the respective policy file and is not applied recursively to its sub-folders i.e. if you create new folders in the folder “Drafts”, which doesn’t contain a policy file, the new folders will be stored on the second volume.

If the policy file is missing or both files are stored in the root of the volume pool, Tiger Store assumes that the default behaviour should be used i.e. the folder should be created on the same file system on which the containing folder is stored or, in case this is the root of the volume pool - on the volume that has more free space.

**Note:** *You can create the policy file from any connected Tiger Client that can mount the pool or the volumes in it.*

### To set policy for newly created folders from Windows:

1. In command prompt, navigate to the folder where you want to create the policy file (the root of the volume pool or a subfolder in the pool).
2. Do one of the following:
  - To set balance by size policy, execute the following command:  
`type NUL > .pool_balance_size`
  - To set balance by count policy, execute the following command:  
`type NUL > .pool_balance_count`

The file is created in the specified location and Tiger Store is instructed to create new folders in this location based on the rules of the selected policy.

### To set policy for newly created folders from Mac OS X and Linux:

1. In Terminal/command-line, navigate to the folder where you want to create the policy file (the root of the volume pool or a subfolder in the pool).

**Note:** *As smart storage pooling is not supported on Linux, to create the policy file in the root of the volume pool, simply create it in the root of one of the volumes in it, making sure that another policy file doesn’t exist in the root of the other volumes in the pool.*

2. Do one of the following:
  - To set balance by size policy, execute the following command:  
`touch .pool_balance_size`

- To set balance by count policy, execute the following command:  
`touch .pool_balance_count`

The file is created in the specified location and Tiger Store is instructed to create new folders in this location based on the rules of the selected policy.

## Files and Folders Ambiguity

As Tiger Store lets you unite in a virtual volume pool volumes that already contain data, it is possible ambiguity of file objects to occur i.e. files/folders with one and the same name to exist in exactly the same location on two or more member volumes. Additionally, Linux Tiger Clients can also contribute to file/folder ambiguity as they always mount the individual volumes and there's no way to prevent them from creating a folder/file with one and the same name in exactly location on more than one of the volumes.

Tiger Store discerns three types of ambiguity:

**folder ambiguity** — folders with one and the same name existing in exactly the same location on two or more volumes in the pool - for example, a folder “Work” in the root of two shared volumes.

**file ambiguity** — files with one and the same name existing in exactly the same location on two or more volumes in the pool - for example, a file “Work” in the root of two shared volumes in the pool.

**combined ambiguity** — a file and a folder with identical names existing in exactly the same location on two or more member volumes in the pool - for example, a folder “Work” and a file “Work” in the root of two volumes in the pool.

Although no data is lost after enabling smart storage pooling, the operating system does not allow two or more files/folders with exactly the same name to coexist in the same location.

When ambiguity occurs with folders, Tiger Store simply displays only one folder in the storage pool and it contains the merged contents of all ambiguous folders with the same name. Still, the displayed folder has the attributes of the ambiguous folder that has been most recently modified. For example, if a folder “Work” with Hidden attributes is stored in the root of volume A and has been most recently modified, and a folder “Work” with Read-only attributes is stored in the root of volume B, the folder “Work” in the root of the storage pool has Hidden attributes. Additionally, if you attempt to delete an ambiguous folder, all folders with the same name are deleted from their volumes.

When ambiguity occurs at file level, Tiger Store displays the ambiguous file with latest modification time stamp and hides the other instances. When performing a file operation on an ambiguous

## Smart Storage Pooling

file in the file browser of your operating system, you can expect the following:

- deleting the ambiguous file that is shown in the storage pool deletes all other ambiguous files as well;
- renaming the ambiguous file that is shown in the pool renames all other ambiguous files as well;
- moving an ambiguous file, moves only the file displayed in the pool and deletes the other ambiguous files with the same name;

In the case of combined ambiguity, Tiger Store always displays the folder and hides the file with the same name. When performing a file operation, Tiger Store performs it only on the folder and ignores the files with the same name in the same location.

## Resolve Ambiguities


It is highly advisable to resolve all ambiguities in your pool. You can resolve ambiguities in the file browser of any Tiger Client that has mounted the pool. On Mac OS X and Windows Tiger Clients, you should first disable smart storage pooling and mount the individual volumes. To resolve ambiguities from Linux Tiger Clients, there's no need to disable smart storage pooling. You can resolve ambiguities in the following ways:

- by deleting, renaming or moving the ambiguous file/folder (file ambiguity, folder ambiguity and combined ambiguity);
- by unifying the attributes of the ambiguous folders (folder ambiguity);

**Important:** *When renaming or moving an ambiguous file, you should take care not to create a new ambiguity.*

### To resolve ambiguity in a Tiger Client's file browser:

1. *(if you resolve ambiguities from Mac OS X or Windows)* In the Shared Volumes page, clear the "Enable smart storage pooling" check box, to disband the volume pool and let Tiger Clients access the individual Tiger Store volumes.

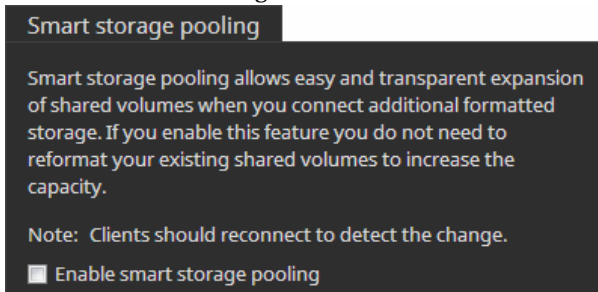

**Note:** *You cannot change smart storage pooling settings, if Tiger Bridge data replication is enabled.*

2. In the file browser of your operating system, open one of the member volumes to the ambiguous file/folder and do one of the following:
  - delete, rename or move to another location the ambiguous file/folder;
  - change the ambiguous folder's attributes to match the attributes of the other ambiguous folders with the same name;
3. Repeat the above step until all ambiguities in the pool are resolved.
4. *(optional, if you have disabled smart storage pooling)* In the Shared Volumes page, select the "Enable smart storage pooling" check box, to unite the available Tiger Store volumes in a pool.



# 4

## Manage the Tiger Store Storage

<i>View Storage Information</i> . . . . .	47
<i>Share or Unshare Volumes</i> . . . . .	49
<i>Make a Volume Offline</i> . . . . .	51
<i>Set Volume Mount Location (Windows Only)</i> . . . . .	51
<i>Create New Volume</i> . . . . .	53
<i>Manage Dynamic Disks Connected to the Appliance</i> . . . . .	64
<i>Rename a Tiger Store Volume</i> . . . . .	65
<i>Storage Maintenance</i> . . . . .	67
<i>Share a Volume as a SMB/CIFS Share</i> . . . . .	69

## Manage the Tiger Store Storage

For the purposes of the Tiger Store workflow, you can manage the volumes accessible to the storage server in the following ways:

- Share/unshare a volume (see “Share or Unshare Volumes” on page 49).
- Make a volume offline (see “Make a Volume Offline” on page 51).
- Set volume mount location on Windows Tiger Clients (see “Set Volume Mount Location (Windows Only)” on page 51).

Additionally, depending on whether you use the software-only version of the product or a Tiger Store appliance, you can perform some or all of the following operations on volumes, connected to the storage server:

- Rename a volume (see “Rename a Tiger Store Volume” on page 65).
- Create a new volume or create/re-build a RAID on appliances exporting their own storage (see “Create New Volume” on page 53).
- Manage dynamic disks seen by Tiger Store appliances managing external volumes (see “Manage Dynamic Disks Connected to the Appliance” on page 64).
- Perform maintenance operations on a volume:
  - Check and repair the file system of a volume (see “Check and Repair The File System” on page 67).
  - Enable/disable auto-defragmentation of the shared volume(s) (see “Volume Defragmentation” on page 67).
  - Manually defragment a shared volume, when auto-defragmentation is disabled (see “Manually Defragment a Tiger Store Volume” on page 68).
- Export a volume or a folder on it as a SMB/CIFS share to computers that don’t have the Tiger Client software installed (see “Share a Volume as a SMB/CIFS Share” on page 69).


Some of the above operations on the shared storage require higher protection. That is why before you perform them, you may have to unshare the volume for Tiger Clients, enter Maintenance mode or even shut down one of the nodes of a Tiger Store storage server with two server nodes. Entering Maintenance mode automatically disconnects all client computers from the shared volumes, that is why it is advisable to make sure that no file operation is being interrupted by entering Maintenance mode. After exiting Maintenance mode client computers are not automatically reconnected to the shared volume and have to manually connect to the storage server in order to mount the volume(s).

**Important:** *If the storage server is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can reconnect to Tiger Store.*

# View Storage Information

## View Shared Volumes Details

You can view details about volumes shared to Tiger Clients in the Shared Volumes page of the web interface. If smart storage pooling is disabled for Tiger Store, it displays all shared Tiger Store volumes as separate volume tiles. If smart storage pooling is enabled, it displays the volume tile of the virtual volume. You can view the following details:

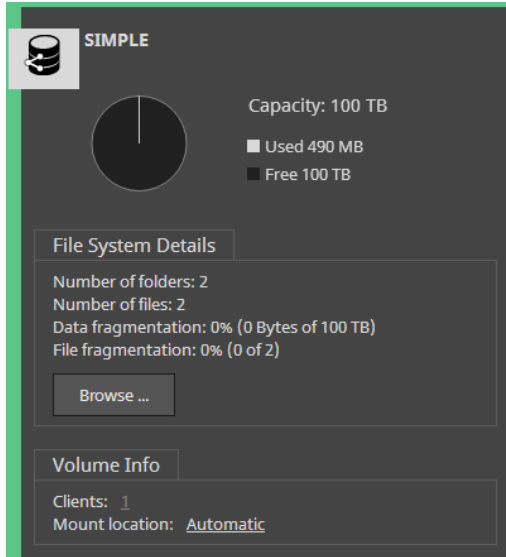


- Volume name.
- Pie chart of the volume capacity with free and used space statistics.
- File system details - number of files and folders on the volume, and fragmentation statistics.
- Number of connected clients.
- Default mount location of the volume on all Windows Tiger Clients.

## View All Volumes Details

In the Volumes page (Storage Management | Volumes) each volume seen by Tiger Store is presented with a separate tile, even if smart storage pooling is enabled on Tiger Store. The volume tile in the Volumes page gives you information about the file system, size, partition and disk type,

Manage the Tiger Store Storage  
the capacity of the volume, the free and used space on it as well as the mode of the volume for Tiger Clients (shared, offline or private).

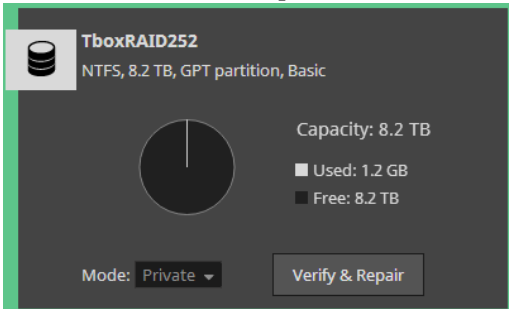


## Viewing Disks Details

**Note:** This view is available only on Tiger Store appliances, which manage external storage.

You can view details about the disks accessible to Tiger Store in the Disks page (Storage Management | Disks).

In the Disks page each accessible disk is represented with a separate tile, that gives you information about the disk capacity, status, type and partition(s).

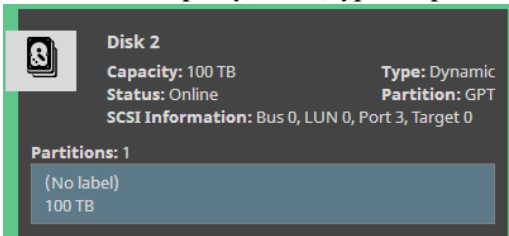


**Note:** To view disk details on a storage server with two server nodes, when both of them are turned on, you should view the Disks page in node view of the respective node (HA Nodes | Manage Node).

## View Storage Chassis Details

**Note:** This view is available only on Tiger Store appliances, which manage internal storage only.

In the Chassis page (Storage management | Chassis) each available chassis is represented with a separate tile, that gives you information about the RAID level and status, the number of drives

comprising the RAID, the total capacity of the RAID and the temperature reported by the RAID controller:

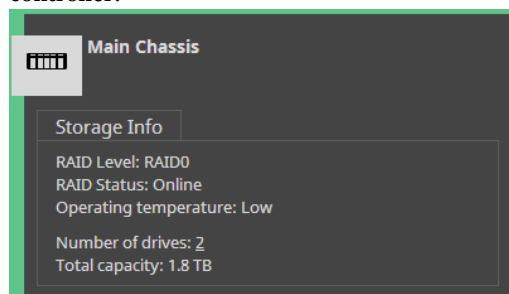

**Note:** If the RAID initialization has been halted or interrupted for some reason, a button *Resume* appears in the chassis' tile, allowing you to resume the RAID initialization process.

## Share or Unshare Volumes

Volumes in the Tiger Store network can have one of the following states:

**Shared** — the volume can be mounted only on Tiger Clients;

**Note:** If smart storage pooling is enabled (see "Smart Storage Pooling" on page 37), the pool mounts on Tiger Clients only if at least one of its volumes is shared.

**Private** — the volume is accessible only to the storage server and neither Tiger Clients, nor computers without the Tiger Client software can mount it and work with it;

**Offline** — the volume is not managed by Tiger Store and can be mounted by any computer that sees it;

**Note:** This option is not available on Tiger Store appliances exporting their own disk array to Tiger Clients.


You can choose which of the volumes managed by the storage server to share to Tiger Clients (by making them shared) and which ones to computers without the Tiger Client software installed (by making them offline). You cannot share a Private volume that is currently used as a replication target by Tiger Bridge. To share such a volume, first disable Tiger Bridge replication on it.

Whenever you perform a maintenance operation like checking and repairing the file system of a volume, instead of disconnecting Tiger Clients from all shared volumes by entering Maintenance mode, you can unshare the volume on which you will perform the respective maintenance operation and after that share it again. You can also set a volume to Private, in order to use it as a replication target for Tiger Bridge. In this case, you cannot share the volume to Tiger Clients until you disable Tiger Bridge replication on it.

## To share a volume to Tiger Clients:

**Important:** *If you share an Offline volume, all non-Tiger Client computers that access it will dismount it and will lose any unsaved data on that volume.*

1. In the left pane of Tiger Store's web interface, click Storage Management and then Volumes.
2. In the Volumes page, find the tile of the private/offline volume, which you want to share and in the drop-down box select Shared.

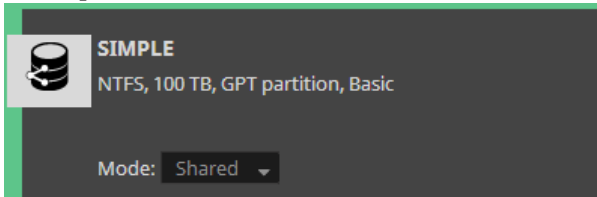


**Note:** *You cannot share a volume if the product is not activated.*

3. Confirm that you want to share the volume to Tiger Clients.  
The volume is shared to all Tiger Clients that have access to it.

## To make a volume Private for the storage server:

**Important:** *If you make Private an Offline volume, all non-Tiger Client computers that access it will dismount it and will lose any unsaved data on that volume.*

1. In the left pane of Tiger Store's web interface, click Storage Management and then Volumes.
2. In the Volumes page, find the tile of the volume, which you want to unshare and in the drop-down box select Private.

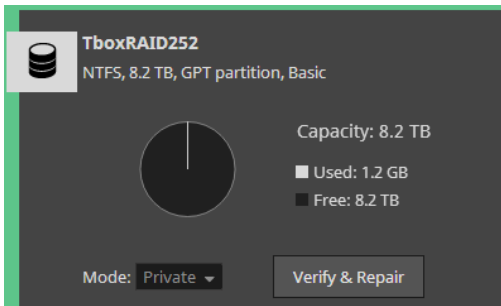

3. Confirm that you want to make the volume Private for the storage server.  
The volume is made Private for the storage server and all computers that had access to it (Tiger Clients or non-Tiger Clients) can no longer mount it.

## Make a Volume Offline

**Note:** *This option is not available on Tiger Store appliances exporting their own disk array to Tiger Clients.*


By default, Tiger Store manages all volumes that the storage server is connected to. Whether or not the storage server shares them to Tiger Clients, these volumes are protected and cannot be mounted by computers that don't run the Tiger Client software, even though they may have access to these volumes. To let non-Tiger Client computers work and mount volumes that Tiger Store sees, you should remove Tiger Store's protection over them. You can do this by making them Offline. An Offline volume is accessible to any computer that sees that volume.

**Important:** *As offline volumes are not protected by Tiger Store, you should take care not to let more than one computer to mount them at a time in order to prevent data corruption on them.*

### To make a volume offline (remove Tiger Store protection):

**Important:** *If you make a shared volume Offline, all Tiger Clients that access it will dismount it and will lose any unsaved data on that volume.*

1. In the left pane of Tiger Store's web interface, click Storage Management and then Volumes.
2. In the Volumes page, find the tile of the volume, which you want to make offline and in the drop-down box select Offline.

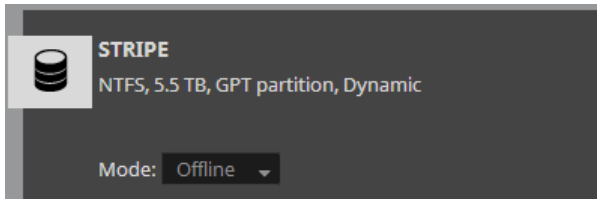

**Note:** *You cannot set to Offline a volume that is currently used as a replication target by Tiger Bridge. To make the volume Offline for the appliance, you must first disable Tiger Bridge replication on it.*

3. Confirm that you want to make the volume Offline.

The volume is made Offline and all non-Tiger Client computers that see it can mount it.

## Set Volume Mount Location (Windows Only)

By default, each Tiger Store volume uses Automatic mount location on all client computers:

- Windows - the first available drive letter.
- Mac OS X - /volumes.

Manage the Tiger Store Storage

- Linux - `/mnt` directory with an automatically created symbolic link `/Volumes`, which points to the `/mnt` directory.


In the web interface of Tiger Store, you can specify a preferred drive letter as mount location of a Tiger Store volume on all Windows machines. This way, you can make a volume to be mounted in one and the same location on all Windows machines that see it.

**Note:** *If you specify a drive letter as default mount location, but this drive letter is already in use on a Windows Tiger Client computer, it uses Automatic as mount location setting.*


You can also overwrite this setting for a particular Windows Tiger Client, by specifying different drive letter as default mount point on this computer. For more information, refer to the “Tiger Client User’s Guide”.

### To set default mount location on Windows Tiger Clients:

1. In the left pane of Tiger Store’s web interface, click Shared Volumes.
2. In the tile of the selected volume, click the link next to Mount Location.

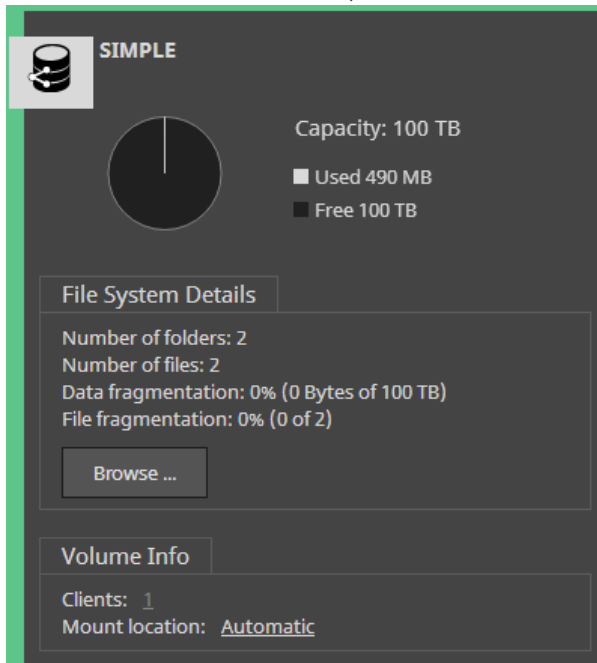

3. In the Mount Location dialog, do one of the following:

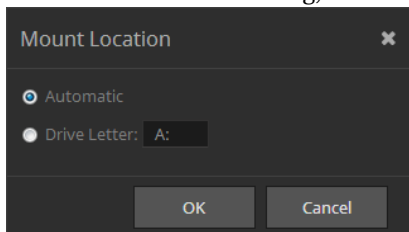

- Select Automatic to let the volume mount on Tiger Clients using the first available drive letter.
- Select Drive Letter and in the drop-down box select a drive letter.

4. Click OK.

The volume is mounted in the new mount location on Tiger Clients only after they remount it.

## Create New Volume

The steps for creating a new volume differ depending on whether your storage server runs a software-only version of Tiger Store or you use a Tiger Store appliance.

On Tiger Store appliances exporting their own disk array to Tiger Clients, you can only create a new RAID on the chassis of the appliance or re-build an existing RAID. See “Manage RAID” on page 60.

### Create New Volume (Software-only version)


You can create a new volume on the computer that is storage server after you enter Maintenance Mode. Entering Maintenance mode automatically disconnects all Tiger Clients from the shared storage and stops any file operation going on at the moment.

You can also create a new volume on the disks of a volume seen by the storage server from any non-Tiger Client computer that sees these disks, as long as the volume is made Offline in the Tiger Store interface (see “Make a Volume Offline” on page 51).

## Manage the Tiger Store Storage

### To create a new volume:


1. In the left pane of the web interface, click System and then Maintenance.
2. In the Maintenance page, click Enter Maintenance Mode and then confirm that you want to enter Maintenance mode.

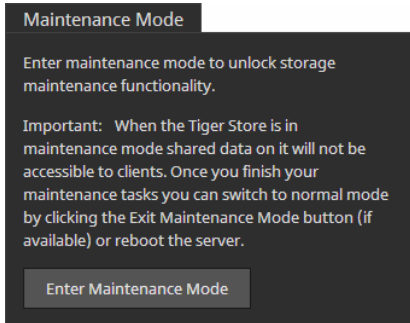

The storage server automatically disconnects all Tiger Clients currently accessing the volumes.

**Important:** *If you exit Maintenance mode or the storage server is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can re-connect to Tiger Store.*

3. On the storage server, create the new volume, following the steps described in your OS documentation.
4. In the left pane of the web interface, click System and then Maintenance.
5. In the Maintenance page, click Exit Maintenance Mode.

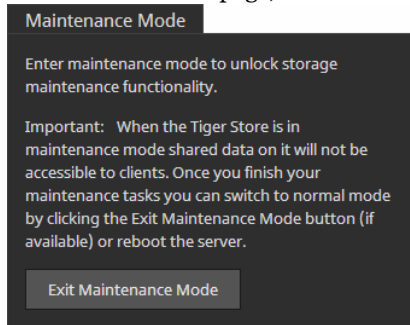

6. In the left pane of the web interface, click Storage Management and then Volumes.
7. Do one of the following:
  - to share the volume to Tiger Clients, in the tile of the newly created volume, click Shared.
  - to let non-Tiger Client computers access the volume, in the tile of the newly created volume, click Offline.

## Create New Volume on a Tiger Store Appliance

**Note:** *On Tiger Store appliances exporting their own disk array to Tiger Clients, you can only create a new RAID on the chassis of the appliance or re-build an existing RAID. See "Manage RAID" on page 63.*

You can create a new volume in the web UI of a Tiger Store appliance managing external storage. You can create either a simple GPT volume (on a single disk) or an NTFS striped volume (on multiple disks). The new volume can be on disks that are not part of any volume or on the disks of an existing volume. When you create a new volume on the disks of an existing volume, you need to clean the disks of their storage type (basic or dynamic). For more information, refer to "Clean Disks" on page 55. When creating an NTFS striped volume, you can set the stripe chunk size of the new volume.

You can also create a new volume on the disks of a volume seen by Tiger Store from any non-Tiger Client computer that sees these disks, as long as the volume is made Offline in the Tiger Store interface (see "Make a Volume Offline" on page 51).

### Clean Disks

To create a new volume on the disk(s) of an existing volume, you should first clean the disks of their storage type. By cleaning a disk from its storage type you destroy the existing volume and all data on it. When the disks, on which you want to create a new volume in Tiger Store's web UI, are not part of an existing volume, there's no need to clean them.

On appliances with two server nodes, you can clean a volume's disks or create a new volume in cluster view (the appliance's web UI), but only one of the server nodes must be online. When both server nodes of your appliance are online, before proceeding you should shut down one of the server nodes.

**Important:** *Cleaning a disk is an operation that requires entering Maintenance mode. Entering Maintenance mode automatically disconnects all client computers from the shared storage and stops any file operation going on at the moment.*


### To clean a disk of its storage type:

1. In the left pane of the web interface, click System and then Maintenance.

**Important:** *On appliances with two server node, both of which are online, before entering Maintenance mode in cluster view, you must first shut down one or the other server node in node view of the web interface.*

## Manage the Tiger Store Storage


2. In the Maintenance page, click Enter Maintenance mode and confirm then confirm that you want to enter Maintenance mode.

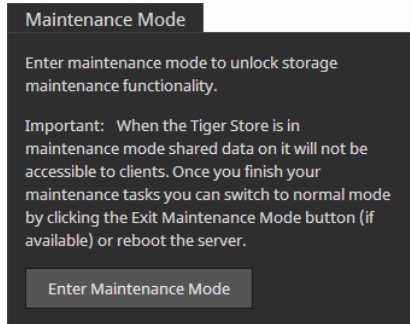

The appliance automatically disconnects all Tiger Clients currently accessing the volumes and the button changes to Exit Maintenance mode.

**Note:** *If you exit Maintenance mode or the appliance is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can re-connect to Tiger Store.*

3. In the left pane of Tiger Store's web interface, click Storage Management and then Disks.
4. In the Disks page, select the tile of the disk that you want to clean and click Clean Disk in the menu on top of the page.

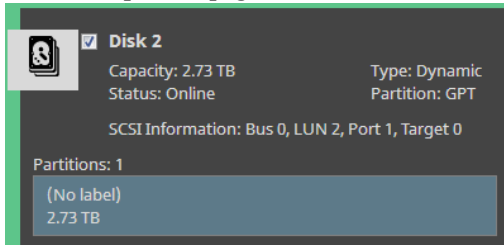

Tiger Store cleans the selected disks of their storage type and when the operation finishes updates their tiles with type "Unknown".

**Tip:** *You can view the operation progress in the band at the top of the page.*

5. Do one of the following:
  - Without exiting Maintenance Mode, proceed to create a new volume on the cleaned disk(s).
  - Exit Maintenance Mode (go to System | Maintenance, and click Exit Maintenance Mode) to let client computers connect to the shared volumes again.

## Create New Basic GPT Volume


**Important:** *Creating a new volume is an operation that requires entering Maintenance mode. Entering Maintenance mode automatically disconnects all client computers from the shared volumes and stops any file operation going on at the moment.*

**To create a new basic GPT volume:**

1. In the left pane of the web interface, click System and then Maintenance.

**Important:** *On appliances with two server node, both of which are online, before entering Maintenance mode in cluster view, you must first shut down one or the other server node in node view of the web interface.*


2. In the Maintenance page, click Enter Maintenance mode and confirm then confirm that you want to enter Maintenance mode.

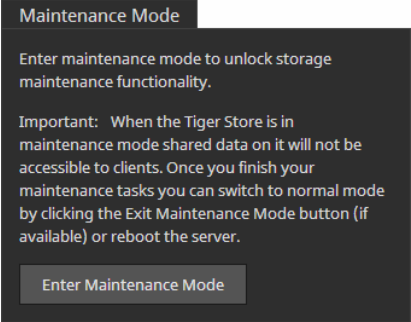

The appliance automatically disconnects all Tiger Clients currently accessing the volumes and the button changes to Exit Maintenance mode.

**Note:** *If you exit Maintenance mode or the appliance is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can re-connect to Tiger Store.*


3. In the left pane of Tiger Store’s web interface, click Storage Management and then Disks.
4. Select the tile of the disk on which you want to create the new basic GPT volume and click Create Volume.

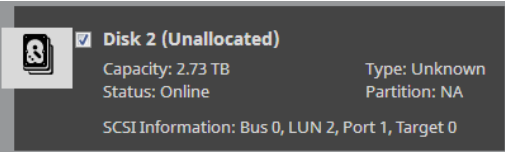

**Note:** *The disk you have selected must be with "Unknown" type, designating it's cleaned of its storage type formatting.*

Manage the Tiger Store Storage

5. In the Volume dialog, specify the name of the new volume and click OK.

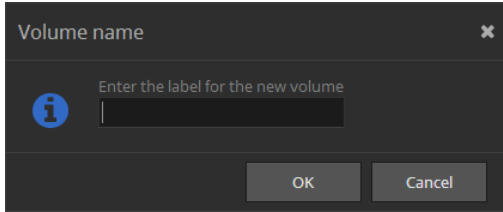A dark-themed dialog box titled "Volume name" with a close button (X) in the top right corner. Inside the dialog, there is a text input field with a placeholder label "Enter the label for the new volume". To the left of the input field is a blue circular icon containing a white lowercase letter 'i'. At the bottom of the dialog, there are two buttons: "OK" and "Cancel".

6. Exit Maintenance Mode (in System | Maintenance, click Exit Maintenance Mode) to let Tiger Clients connect to the shared volumes again.
7. Do one of the following:
  - to share the volume to Tiger Clients, in the tile of the newly created volume, click Shared.
  - to let non-Tiger Client computers access the volume, in the tile of the newly created volume, click Offline.
8. On an appliance with two server node, manually turn on the other server node by clicking its power button on the front panel of the appliance.

## Create New Striped GPT Volume


**Important:** *Creating a new volume is an operation that requires entering Maintenance mode. Entering Maintenance mode automatically disconnects all client computers from the shared volumes and stops any file operation going on at the moment.*

### To create a new striped GPT volume:

1. In the left pane of the web interface, click System and then Maintenance.

**Important:** *On appliances with two server node, both of which are online, before entering Maintenance mode in cluster view, you must first shut down one or the other server node in node view of the web interface.*

2. In the Maintenance page, click Enter Maintenance mode and confirm then confirm that you want to enter Maintenance mode.

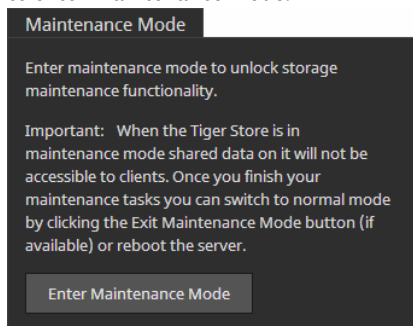


The appliance automatically disconnects all Tiger Clients currently accessing the volumes and the button changes to Exit Maintenance mode.


**Important:** *If you exit Maintenance mode or the appliance is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can re-connect to Tiger Store.*

3. In the left pane of Tiger Store's web interface, click Storage Management and then Disks.
4. Select the tiles of the disks on which you want to create the new striped volume and click Create Stripe.

**Note:** *The disks you have selected must be with "Unknown" type, designating they are cleaned of their storage type formatting.*

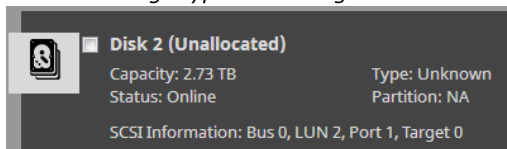

5. In the Volume Name dialog, specify the name of the new volume.

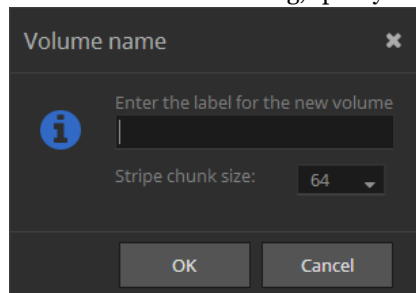

6. (optional) In Stripe Chunk Size, select the desired value.

**Note:** *If you don't make a selection, Tiger Store uses the default stripe chunk size of 64KB.*

Manage the Tiger Store Storage

7. Click OK.

Tiger Store creates a new striped volume on the selected disks.

8. Exit Maintenance Mode (in System | Maintenance, click Exit Maintenance Mode) to let Tiger Clients connect to the shared volumes again.

9. Do one of the following:

- to share the volume to Tiger Clients, in the tile of the newly created volume, click Shared.
- to let non-Tiger Client computers access the volume, in the tile of the newly created volume, click Offline.

10. On an appliance with two server node, manually turn on the other server node by clicking its power button on the front panel of the appliance.

## Manage RAID

**Note:** *You can create a new RAID or re-build an existing RAID through the Tiger Store web interface only on appliances exporting their own storage.*

### Create a New RAID

**Note:** *This option is available only on Tiger Store appliances, exporting their own disk array.*


You can create a new RAID on the disks of the main chassis or the expansion chassis. For the purpose, first you have to destroy the existing RAID (if any) and then create the new RAID, choosing between the following RAID types:

- RAID 5 (default) - provides optimal performance and allows the RAID to operate with one failed drive;
- RAID 6 - provides improved fault tolerance, allows the RAID to operate with up to two failed drives;
- RAID 0 - provides maximum speed;

**Important:** *All data on the disks will be lost after creating a new RAID. That is why it is advisable to back it up before creating the RAID.*

**To create a new RAID:**


1. In the left pane of the web interface, click System and then Maintenance.
2. In the Maintenance page, click Enter Maintenance mode and confirm then confirm that you want to enter Maintenance mode.

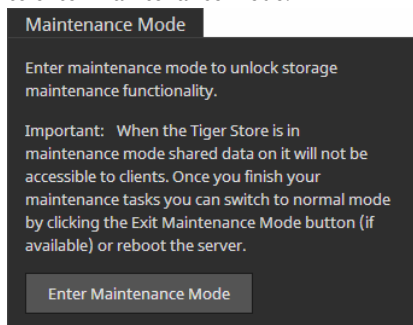

All connected Tiger Clients are automatically disconnected from the storage and any file operation going on at the moment is canceled.

**Important:** *If you exit Maintenance mode or the appliance is rebooted while in Maintenance mode, any maintenance operation going on at the moment is canceled and clients can re-connect to Tiger Store.*


3. In the left pane of the web interface, click Storage Management and then Chassis.
4. In the Chassis page, find the tile of the chassis whose RAID you want to destroy and click Destroy RAID.

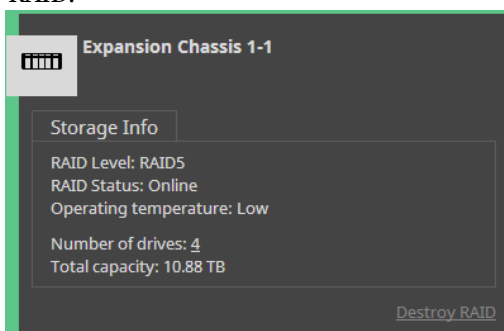


5. Click Continue to confirm that you want to destroy the RAID.  
Tiger Store destroys the RAID.

Manage the Tiger Store Storage

6. In the tile of the chassis, whose RAID you have just destroyed click Create RAID.

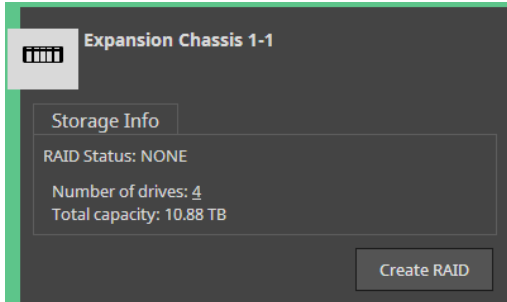


7. In Create New RAID Options dialog, select the RAID type and click Continue.

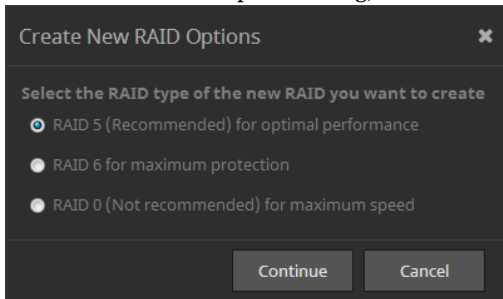

8. When the newly created RAID appears as a volume in the Volumes page, exit Maintenance mode (in System | Maintenance, click Exit Maintenance Mode) and share the new volume to Tiger Clients.

## Re-build Existing RAID

The RAID controller of Tiger Store appliance exporting its own storage reports the RAID status in the Volume tile of the respective chassis:

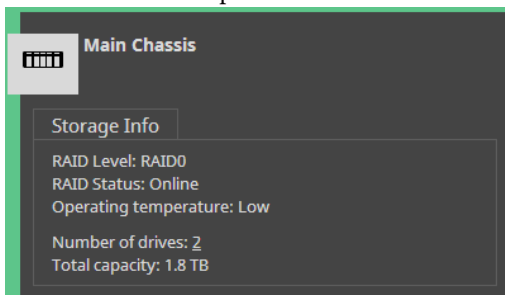


- Online
- Degraded - a drive has failed and the RAID needs to be re-built
- Rebuilding - the RAID is in the process of re-building

**Note:** If the re-building of the RAID has been interrupted, the status displayed is "Degraded (Rebuild - Halted)".

Depending on how your RAID is configured, you can replace one (RAID5) or two (RAID6) failed hard disks, while the appliance is operating and no data on the RAID will be lost (refer to the appliance Assembly Guide for information about replacing a failed RAID drive). Once you replace the failed drive(s), you must re-build the RAID, following the steps below.

### To re-build the RAID:

1. In the left pane of the web interface, click Storage Management and then Chassis.
2. In the tile of a volume with degraded RAID status, click Rebuild.

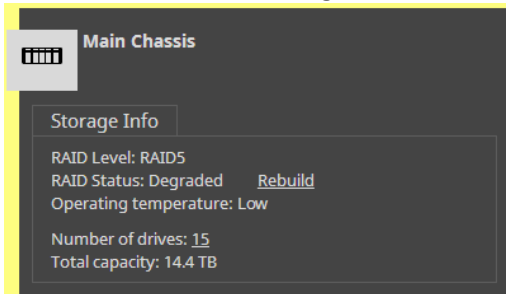

While the RAID is being re-built, it is still available to Tiger Clients although with decreased performance. You can pause the RAID re-building and then resume it again.

### Import RAID


**Note:** This option is available only on 3U Tiger Store appliances with hardware version 3.0 exporting their own storage.

If the RAID controller of your Tiger Store appliance fails to detect its disks (they are reported as Foreign), you can import the RAID, following the steps below.

Manage the Tiger Store Storage

### To import the RAID:

1. In the left pane of the web interface, click Storage Management and then Chassis.
2. In the tile of a volume whose disks are reported as Foreign, click Import RAID.

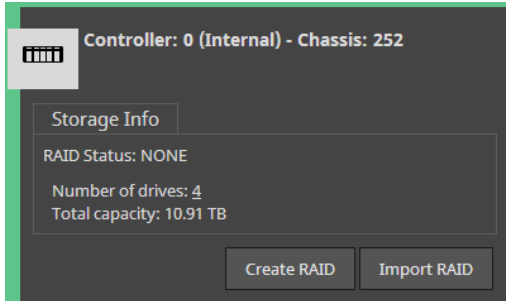

## Manage Dynamic Disks Connected to the Appliance

**Note:** *Tiger Store appliances exporting their own storage cannot have access to dynamic disks.*


When you connect your appliance to an already formatted striped volume, it is possible that Tiger Store doesn't recognize the LDM configuration of the volume's dynamic disks and they appear as Foreign. To be able to manage the striped volume, you should import its disks.

**Important:** *Once you import the disks on Tiger Store, you may have to import them on each computer that has previously seen the striped volume.*

You may also have to reactivate dynamic disks that are with Offline or Missing status on the appliance, in order to manage them.

### To import foreign disks:

1. In the left pane of the web interface, click Storage Management and then Disks.
2. In the tile of a Foreign disk, click "Import this disk".

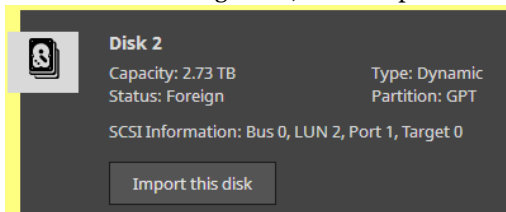


3. Confirm that you want to import the selected disk on Tiger Store.  
Tiger Store imports all dynamic disks comprising the striped volume.

**Note:** To let Windows SAN Tiger Clients access the striped volume, you should import its disks in Windows Disk Management on each Windows SAN Tiger Client too.

### To reactivate dynamic disks:

1. In the left pane of the web interface, click Storage Management and then Disks.
2. In the tile of a disk with Offline/Missing status, click “Reactivate this disk”.

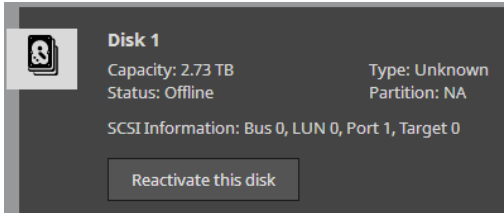

Tiger Store reactivates all disks with Offline/Missing status in the same group.


## Rename a Tiger Store Volume

The name of each volume, managed by Tiger Store, is used as its label on client computers. When smart storage pooling is enabled on the appliance, the name of the pool is used as a label of the virtual volume (by default this is “Pool”). You can change the name of a shared volume/pool at any time. Computers that have mounted a shared volume with its old name can see it with its new name only after reconnecting to the storage server.


Manage the Tiger Store Storage

### To rename a Tiger Store volume:

1. In the left pane of the web interface, click Shared Volumes.
2. Click the name of the volume/pool in the tile of a shared volume.

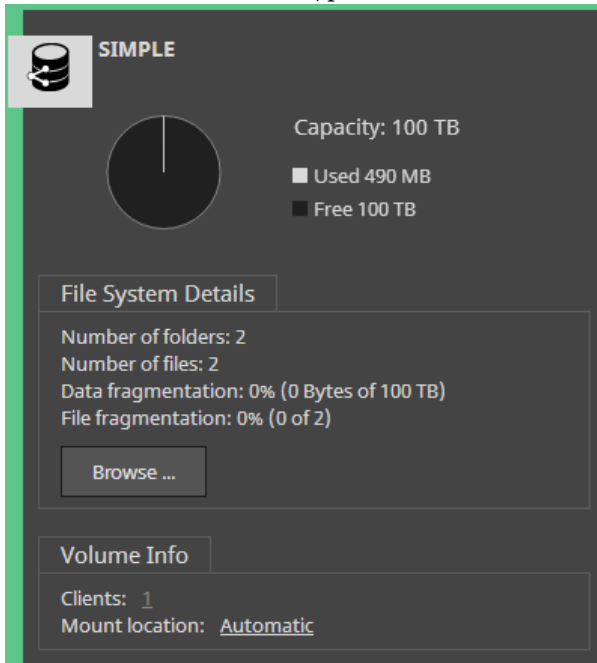

3. In the Rename dialog, enter a new name of the volume/pool and click OK.

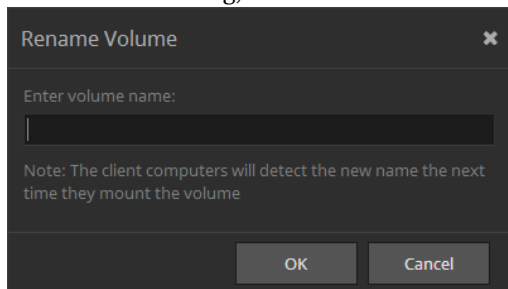

**Note:** In case you need to immediately rename the volume again, wait for the web interface to refresh automatically with the latest volume name, before assigning a new one. Otherwise it is possible Tiger Store to revert to the last saved name.

The new volume name is displayed on client computers only after they remount the volume.

# Storage Maintenance

## Check and Repair The File System

**Note:** On Tiger Store appliances, request assistance from the Tiger Technology support for checking and repairing the file system of a volume.

It is advisable to use the operating system tools, like chkdsk, for checking and repairing the file system of a volume. Before you proceed, make sure that Tiger Clients do not have access to the volume, by making it Private for the storage server. Once the file system of a volume is repaired, you can share it to Tiger Clients again.

Note that checking and repairing the file system of a Private volume, which is currently used as a Tiger Bridge replication target, pauses Tiger Bridge's replication & tiering until this maintenance operation finishes.


## Volume Defragmentation

Tiger Store's defragmentation engine is designed not only to reduce the fragmentation of the file system, but also to optimize the processing of file sequences on the shared volumes. By default, Tiger Store's auto-defragmentation is enabled. It defragments data on the shared volume(s) only when the system is in idle state (overall traffic to the shared storage doesn't exceed 10MB/s for at least 30 minutes) and automatically pauses, when traffic above this threshold is detected. You can disable auto-defragmentation and run defragmentation manually from the web interface instead.

**Note:** You cannot run defragmentation (automatic or manual) on a private volume (volume that is not shared to Tiger Clients).

### To enable/disable auto-defragmentation:

1. In the left pane of the web interface, click Shared Volumes.
2. In the Auto-defragmentation field, do one of the following:

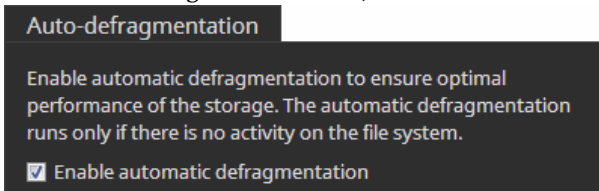


- Select the “Enable automatic defragmentation” check box, to enable auto-defragmentation of the volume.
  - Clear the “Enable automatic defragmentation” check box, to disable auto-defragmentation of the volume.
3. Click Continue to Confirm the selected option.

## Manually Defragment a Tiger Store Volume

If you have disabled Tiger Store's automatic defragmentation (see "Volume Defragmentation" on page 67), it is advisable that you perform manual defragmentation of the volume(s) when needed. You can keep track of the fragmentation of each Tiger Store volume in the Volume tile - it displays information about both data fragmentation and file fragmentation. Both values show the fragmentation level of data on the disk, but using different measuring systems. Data fragmentation lists the amount of fragmented data in bytes, while file fragmentation lists the number of fragmented files. Manual defragmentation can be stopped at any time.

### To manually defragment a Tiger Store volume:

1. In the left pane of the web interface, click Shared Volumes.
2. In the tile of a selected volume, click Defragment.

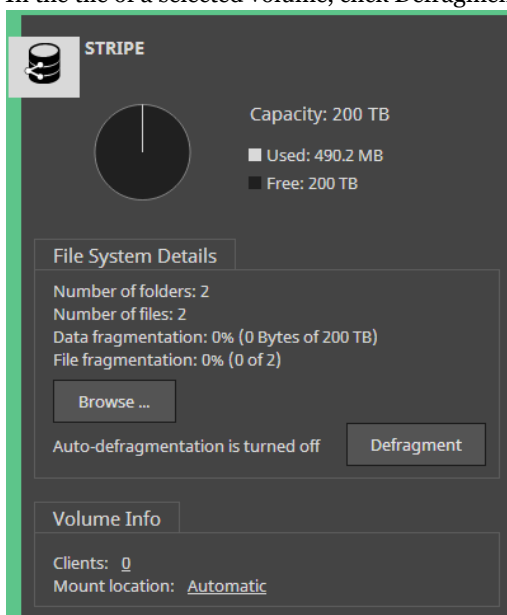

**Important:** When smart storage pooling is enabled, to manually defragment the volumes comprising the pool, you must first disable smart storage pooling (see "Enable/Disable Smart Storage Pooling" on page 38).

While the process is running, the Volume tile displays the defragmentation progress percentage and allows you to stop the defragmentation by clicking Stop Defrag.

## Share a Volume as a SMB/CIFS Share


The web interface of Tiger Store on appliances allow you to export a shared volume (or a folder on it) as a SMB/CIFS share to computers on the network that don't have the Tiger Client software installed. You can export as many shares as you like or remove any one of them at any time. The exported shares are accessible to all computers on the same LAN segment, by typing the name/IP address of the appliance in the file explorer of the operating system.

By default, the newly created SMB/CIFS share is accessible with “Full access” permissions to everyone. You can change the access permissions to the share for Everyone (domain or workgroup users) in the web interface of Tiger Store.

**Note:** *To change the name of a share, you should first remove it then re-create it with its new name.*

### To create a SMB/CIFS share on a Tiger Store volume:

1. In the left pane of the web interface, go to System | SMB/CIFS Sharing and click Share a Folder.
2. In Share a Folder, click Browse and browse to the desired volume and select the folder on it.

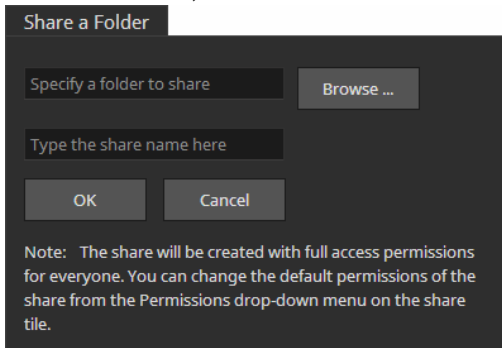

**Tip:** *To share a whole volume, select the root of the volume.*


3. Enter a name of the share and click OK.

**Note:** *If you do not specify a name of the share, it automatically takes the name of the folder.*

The share appears in the list of shares. By default, it is accessible to everyone with “Full access” permissions. To change the share permissions, refer to page 70.

**To remove a SMB/CIFS share of a Tiger Store volume:**

1. In the left pane of Tiger Store's web interface, click System and then SMB/CIFS Sharing.
2. Find the tile of the share that you want to remove and click Stop Sharing.

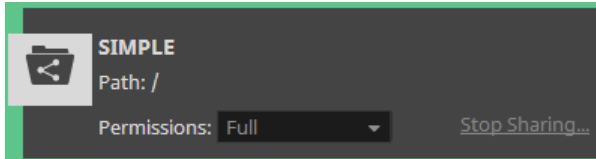


**Important:** All LAN clients that are currently accessing the SMB/CIFS share through Tiger Store lose connection to it and any file operation going on at the moment may fail.

3. Confirm that you want to remove the share.  
The share is removed from the list of shares.

**To set permissions of a SMB/CIFS share on a Tiger Store volume:**

1. In the left pane of Tiger Store's web interface, click System and then SMB/CIFS Sharing.
2. Find the tile of the share whose permissions you want to set.

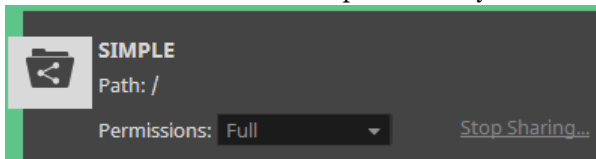

3. In the drop-down box, select the respective permissions for Everyone.  
The permissions are applied on the next re-mount of the share on non-Tiger Client computers.

# 5

## Manage Tiger Clients

- View Tiger Clients Information and Connection Status . . . . . 72*
- Connect/Disconnect a Tiger Client . . . . . 73*
- Specify the Allowed Volumes per Tiger Client . . . . . 74*
- Restrict Tiger Clients from Manually Disconnecting . . . . . 75*
- View Traffic Information . . . . . 76*


## Manage Tiger Clients

As a Tiger Store administrator you can manage Tiger Client computers in the following ways:


- view connected Tiger Clients and their connection status.
- connect/disconnect a Tiger Client computer from the storage server.
- restrict Tiger Clients from disconnecting from the storage server.
- specify the volumes, which each Tiger Client can mount.
- view traffic information for Tiger Clients (see “View Traffic Information” on page 76).

## View Tiger Clients Information and Connection Status


The Clients page of the web interface lists all computers on the same network, which run the Tiger Client driver and have added the Tiger Store computer/appliance to their storage servers’ list. Each Tiger Client is represented by a tile, which gives you information about the name, IP address, operating system of the computer and the version of the Tiger Client driver it is running. The tile of a Tiger Client also gives you information about the computer’s connectivity to the storage server:

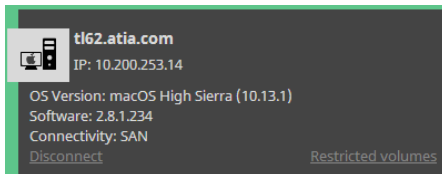

The computer is connected as a SAN client.

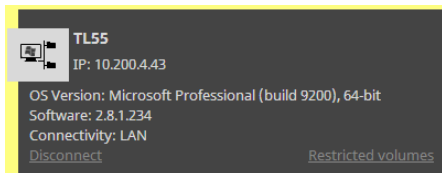

The computer is connected as a LAN client.

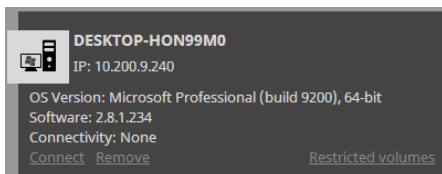

The computer is not connected to the storage server or is offline.


You can remove the tile of a disconnected Tiger Client computer from the list, when the computer no longer runs the Tiger Client driver, for example. If the Tiger Client computer you have removed

from the list is online, the Tiger Store computer/appliance is automatically removed from the client computer's list of storage servers.

To make a removed Tiger Client appear again on the Clients page, on the client computer you must add the storage server to the list of storage servers and manually connect to it. If the client computer is offline, when you remove it from the Clients page, to make it appear on the Clients page, once it is turned on again manually connect it to the storage server.

### To remove a Tiger Client's tile from the list of client computers:

1. In the left pane of Tiger Store's web interface, click Clients.
2. In the tile of a disconnected client computer, click Remove.

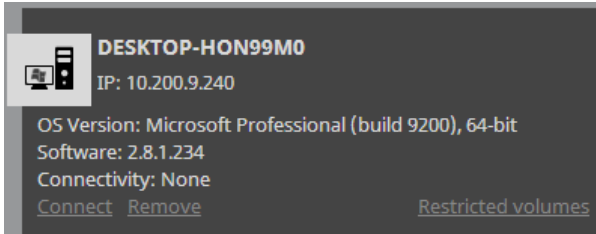

The Tiger Client tile is removed from the list.

## Connect/Disconnect a Tiger Client

In the tile of a Tiger Client in the Clients page, you can force disconnect a selected Tiger Client from the shared volumes it sees. Vice versa, you can force connect a disconnected Tiger Client computer as long as it is currently online.


**Note:** *Disconnected Tiger Clients can manually connect to the appliance following the steps in the "Tiger Client User's Guide".*

### To force disconnect a selected client computer:

**Important:** *When you disconnect a Tiger Client from a shared volume, any file operation performed from that computer on the shared volume will be canceled.*

## Manage Tiger Clients

1. In the left pane of Tiger Store's web interface, click Clients.
2. In the tile of the computer that you want to disconnect, click Disconnect.

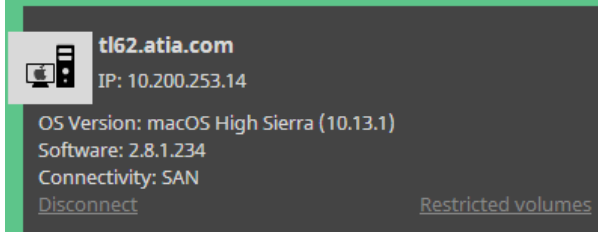


**Note:** The Disconnect button is not present, if the Tiger Client computer has not mounted any volume.

Tiger Store disconnects the selected Tiger Client from all shared volumes it has mounted.

### To force connect a selected client computer:

1. In the left pane of Tiger Store's web interface, click Clients.
2. In the tile of the computer that you want to connect, click Connect.

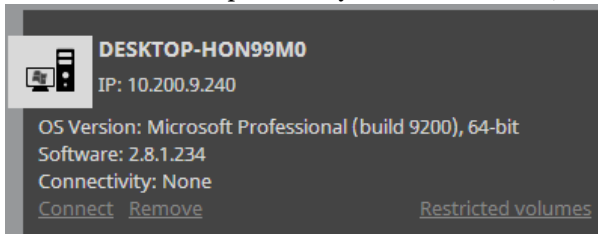


The selected Tiger Client computer mounts all volumes it is allowed to mount.

## Specify the Allowed Volumes per Tiger Client

By default, each Tiger Client can mount all volumes shared by the storage server. You can restrict the mounting of certain volumes on a specific Tiger Client computer.

**To restrict the mounting of a shared volume on Tiger Client computer:**

1. In the left pane of Tiger Store's web interface, click Clients.
2. In the tile of a Tiger Client computer, click Restricted volumes.

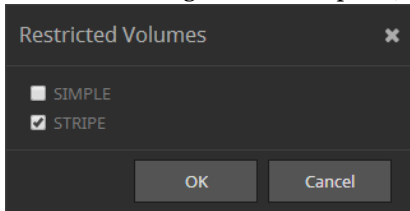


3. In the Restricted Volumes dialog, do one of the following:
  - Select the check box of a shared volume, to restrict the selected Tiger Client from mounting it.
  - Clear the check box of a shared volume, to allow the selected Tiger Client to mount it.
4. Click OK.

## Restrict Tiger Clients from Manually Disconnecting

To ensure that a Tiger Client computer remains connected to the storage server no matter what user is currently logged on to it, you can set Tiger Store to require an administrators password each time a user attempts to disconnect its computer from Tiger Store. By default, this option is disabled.

**To restrict Tiger Clients from manually disconnecting from the storage server:**

1. In the left pane of Tiger Store's web interface, click Clients.
2. In Clients Restriction, do one of the following:

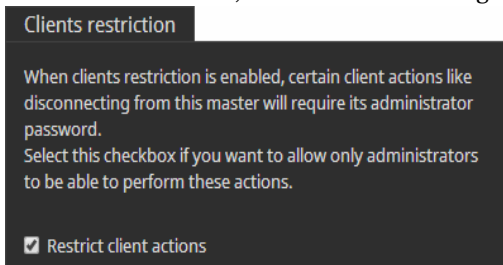

- Select the “Restrict client actions” check box, to require a Tiger Store administrator's password when manually disconnecting from the storage server.

## Manage Tiger Clients

- Clear the “Restrict client actions” check box, to allow require a Tiger Clients to manually disconnect from the storage server.

The option you have selected is applied on each Tiger Client computer once it reconnects to the storage server.


## View Traffic Information

To facilitate you in monitoring the workload of the shared storage and the connectivity with currently connected Tiger Clients, Tiger Store’s web interface offers you the Traffic monitoring tool. You can view data and metadata traffic statistics between the shared volumes and all currently connected computers for a selected period.

### To view traffic information:

1. In the left pane of Tiger Store’s web interface, click Traffic.

The Traffic page appears.

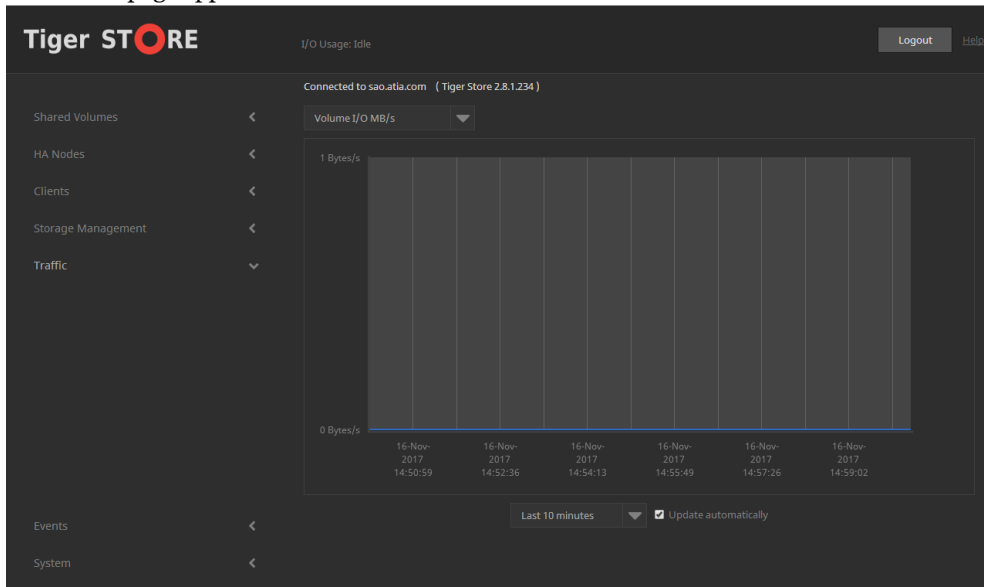

2. In the drop-down box above the graph, select the type of metric:

- Volume I/O in MB/s;
- Volume I/O in requests/s;
- Network I/O in MB/s;

- Network packets/s;
  - Number of open operations;
3. In the drop-down box below the graph, select the time interval for which you want statistics.  
The Traffic page displays a graph showing you the statistics for the parameters you've chosen in the respective drop-down boxes.

**Tip:** *Instead of refreshing the web page to update the results displayed, make sure the "Update automatically" check box is selected, this way allowing the web interface to automatically update the information displayed.*





# Tiger Bridge Integration

<i>Download and Install Tiger Bridge Configuration . . . . .</i>	<i>80</i>
<i>Download and Install Tiger Bridge Tape Management .</i>	<i>82</i>
<i>Manage Data in The Volume Browser . . . . .</i>	<i>84</i>
<i>Tiger Bridge on a Storage Server with High Availability</i>	<i>88</i>

## Tiger Bridge Integration

Tiger Bridge provides data lifecycle management to your shared storage. With its help you can automatically or manually replicate and/or archive data, as well as reclaim space on your shared storage volumes.

To benefit from Tiger Bridge, you have to install and activate it on your shared storage server. On a storage server running the software version of Tiger Store, you can install and configure Tiger Bridge following the steps in the latest version of the Tiger Bridge Administration Guide. Unless Tiger Bridge is already installed on your Tiger Store appliance, you can install it as a firmware update. Contact Tiger Technology support team for assistance on installing and activating Tiger Bridge on your Tiger Store appliance.

To configure Tiger Bridge on a Tiger Store appliance, you can use the Tiger Bridge Configuration application, which provides remote access to Tiger Bridge from any computer on the same network as the storage server. For more details about downloading and installing the Tiger Bridge Configuration application, see “Download and Install Tiger Bridge Configuration” on page 80.

Additionally, if you are using a tape library as a target, on Tiger Store appliances you can download and install on a remote computer the Tiger Bridge Tape Management application, which lets you manage drives, tapes and the contents on them. For more information, refer to “Download and Install Tiger Bridge Tape Management” on page 82.

Regardless of your storage server type, you can perform manual Tiger Bridge operations on data on your shared storage using the Volume Browser. For more information, refer to “Manage Data in The Volume Browser” on page 84.


## Download and Install Tiger Bridge Configuration

The Tiger Bridge Configuration application provides graphic user interface for activating and configuring Tiger Bridge from a remote computer on the same network as the storage server.

### **To download and install the Tiger Bridge Configuration application:**

1. In the web interface of your storage server, click Manage and type the password for the web interface.
2. Click the Tiger Store logo to load the Downloads page.

### 3. Find the Tiger Bridge Configuration installation file and click Download.

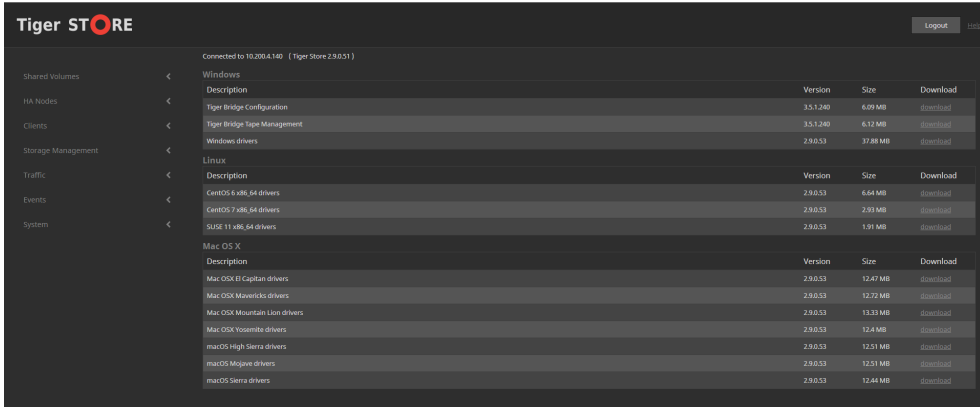

### 4. When the installation file downloads to your computer, double-click it to start the installation and follow the on-screen instructions.

#### To run the Tiger Bridge Configuration:


**Note:** To work with the Tiger Bridge Configuration, you need to run it as administrator.

#### 1. To start the Tiger Bridge Configuration, do one of the following:

- Double-click the Tiger Bridge Configuration shortcut on the desktop.
- Navigate to the installation folder of the Tiger Bridge Configuration and double-click TigerBridgeConfiguration.exe

## Tiger Bridge Integration

2. Enter the IP address of the storage server, on which Tiger Bridge is installed and click Connect.

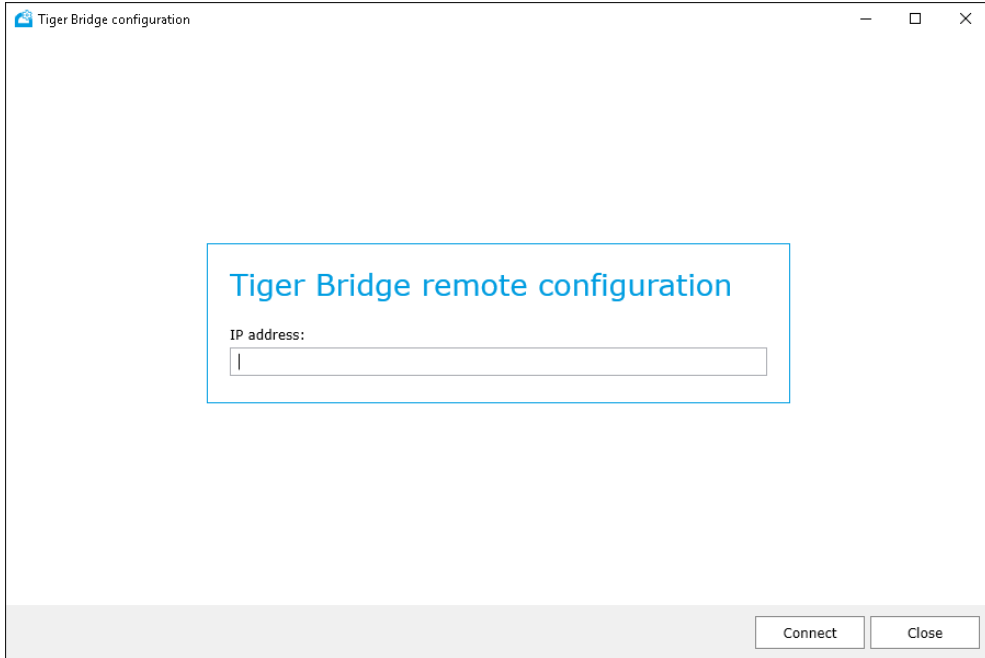

**Important:** If your storage server is deployed with high availability, you must enter the IP address of the current primary node.

**Note:** The dialog for establishing remote connection to the Tiger Bridge server is not available, if Tiger Bridge is installed on the computer from which you run the Tiger Bridge Configuration.

3. Refer to the Tiger Bridge Administration Guide for detailed steps on using the application.

## Download and Install Tiger Bridge Tape Management


Tiger Technology's Tape Management application is designed to work in conjunction with Tiger Bridge in order to facilitate you in performing the following task:

- prepare your tape libraries for work with Tiger Bridge.
- manage and monitor tapes and drives in your libraries.
- explore, manage and download data stored by Tiger Bridge on your tape libraries.

To use the Tiger Bridge Tape Management application on a Tiger Store appliance, you need to install it on a computer, which is on the same network as the storage server and configure it to access the storage server remotely, following the procedures described below.

**To download and install the Tiger Bridge Tape Management application:**

1. In the web interface of your storage server, click Manage and type the password for the web interface.
2. Click the Tiger Store logo to load the Downloads page.
3. Find the Tiger Bridge Tape Management installation file and click Download.

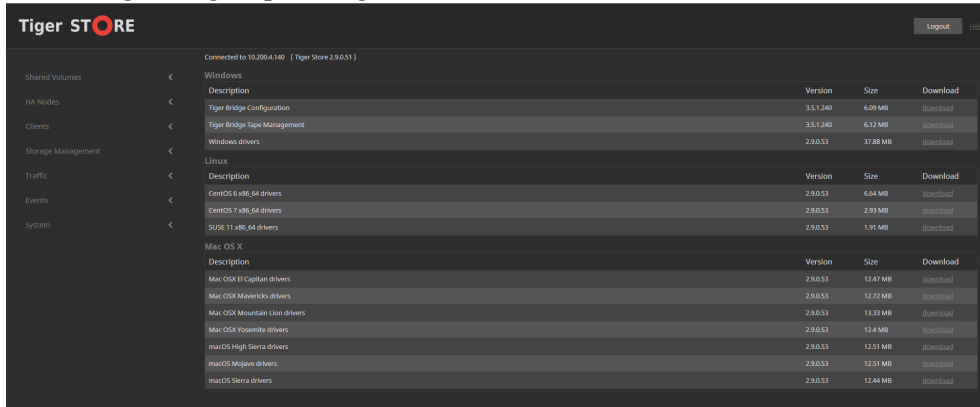


4. When the installation file downloads to your computer, double-click it to start the installation and follow the on-screen instructions.

**To run the Tiger Bridge Tape Management application:**

1. To start the Tiger Bridge Configuration, do one of the following:
  - Double-click the Tiger Bridge Tape Management shortcut on the desktop.
  - Navigate to the installation folder of the Tiger Bridge Tape Management and double-click TigerBridgeTapeManagement.exe

## Tiger Bridge Integration

2. Enter the IP address of the storage server, on which Tiger Bridge is installed and click Connect.

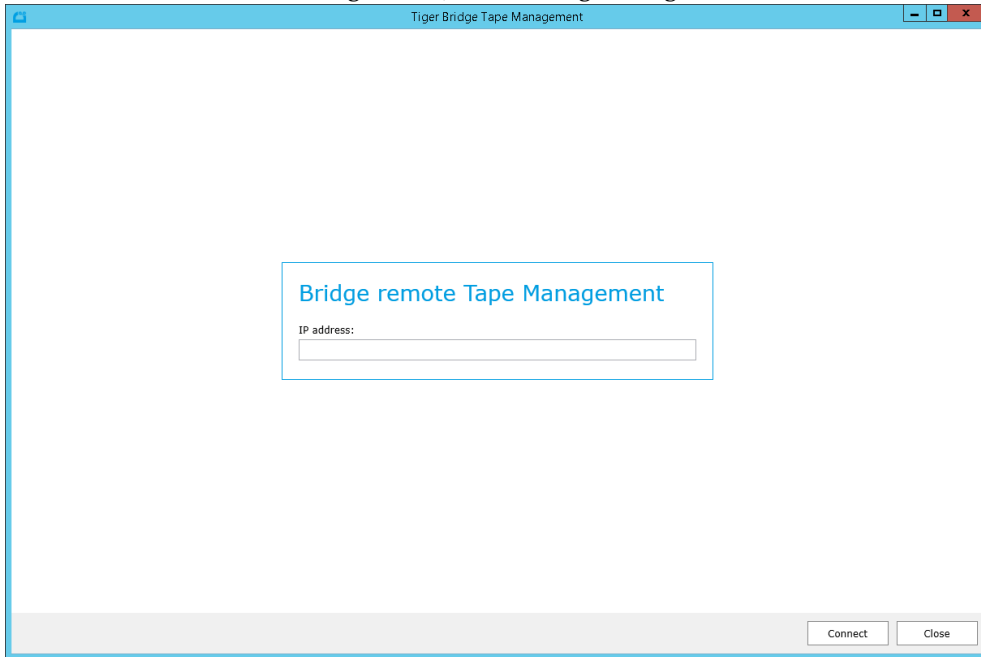

**Important:** *If your storage server is deployed with high availability, you must enter the IP address of the current primary node.*

**Note:** *The dialog for establishing remote connection to the Tiger Bridge server is not available, if Tiger Bridge is installed on the computer from which you run the Tiger Bridge Tape Management.*

3. Refer to the Tiger Bridge Tape Management User's Guide for detailed steps on using the application.

## Manage Data in The Volume Browser

**Note:** *On a storage server running the software version of Tiger Store, you can also manually manage data in Windows Explorer, using the Tiger Bridge shell extension. For more details, refer to the Tiger Bridge Administration Guide.*

The Volume Browser is the place where you can explore data on the shared Tiger Store volumes and manually perform Tiger Bridge operations on it:

- replicate a file or a whole folder.
- reclaim space on the shared storage volumes by replacing a replicated file with a nearline file (a stub file linking to the copy of the file on the target).

- retrieve a nearline file or all nearline files in a folder from the target.
- delete a file or a whole folder from both the source and the target.

**Important:** *Depending on the mode in which Tiger Bridge operates, executing this command either deletes the file just from the source, or both from the source and the target. For more information, refer to the Tiger Bridge Administration Guide.*


- synchronize the contents of the source and the target by rescanning it.

Initiating a task in the Volume Browser always takes precedence over the automatically scheduled Tiger Bridge tasks. That means that if you choose to manually replicate files through the Volume Browser, the execution of the operation will begin immediately and will probably pause the automatic replication queue that is being processed at the moment.


**Note:** *The Volume Browser hides system files such as files associated with the Recycle bin, volume icons, etc.*

To access the Volume Browser:

In the Shared Volumes page of the web interface, click Browse in the tile of a volume.

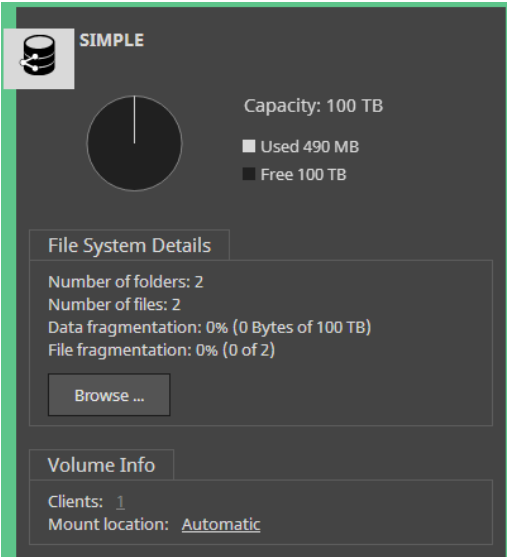

The Volume Browser opens.

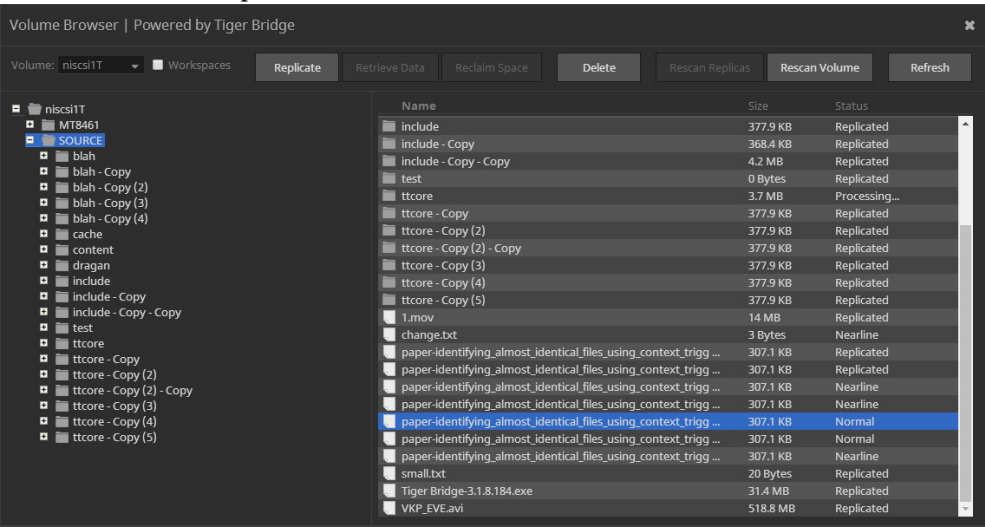

The left pane allows you to navigate the tree structure of the contents of the volume selected in the drop-down box.

**Note:** *To explore or manage Tiger Spaces data on the selected volume, select the "Workspaces" check box next to the Volume drop-down box. To switch the view back to other contents of the volume, clear the "Workspaces" check box.*

By expanding the node of a folder, you can view its hierarchical structure. Clicking an item in the tree view, displays its contents in the right panel.

The file operations you can perform in the Volume Browser depend on the status of the selected file:

**Normal** — a file that does not have a copy on the replication target or a file that has been modified after its last replication (i.e. is subject to replication again);

**Replicated** — a file that is replicated and exists on both the Tiger Store volume and the replication target;

**Nearline** — a stub file pointing to the actual file, which exists only on the target. A nearline file can be retrieved on the source through the Volume Browser.

**Offline** — a stub file pointing to the actual file, which exists only on the archival tier of the target.

**Processing** — Tiger Bridge is currently performing a data lifecycle management operation on the file/folder.

To perform a manual Tiger Bridge operation on a file/folder, simply select it in the right pane and then click the respective button in the Volume Browser taskbar. When performing a Tiger Bridge operation on a folder, you are performing it on all matching files in that folder i.e. for example, clicking Retrieve for a selected folder will retrieve from the target all nearline files in that folder.

**Note:** *When a manual Tiger Bridge operation is not applicable for a selected file/folder in the Volume Browser, its button in the taskbar is inactive. For example, the button Replicate is inactive when you have selected a replicated file in the Volume Browser.*


## Re-scanning Replicated Data

There are some situations in which a replicated file on the target can have no counterpart on the Tiger Store volume. To allow you to create a nearline file for each file existing on the target, Tiger Bridge provides you with a mechanism for re-scanning the replicated data. Thus, when Tiger Bridge detects a replicated file on the target, which does not have a counterpart (a replicated or nearline file) on the Tiger Store volume, Tiger Bridge automatically creates a nearline file in the source folder.

**Note:** *You can re-scan a whole shared volume or just a folder on it.*


## To re-scan replicated data:

In the taskbar of the Volume Browser, do one of the following:

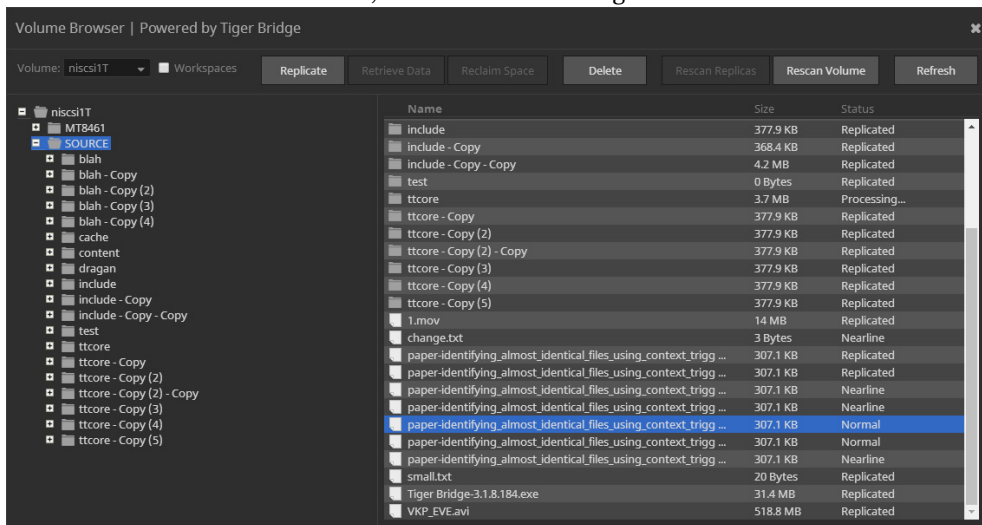

- Click Rescan Volume, to re-scan the whole volume that is selected in the drop-down box of the Volume Browser.
- Browse to and select the folder, whose contents you want to re-scan and then click Rescan Replicas.

## Tiger Bridge on a Storage Server with High Availability


When your storage server is deployed with high availability, both its server nodes must have identical settings in order to provide failover capability. Thus, in order to consistently manage data lifecycle in case of failover, Tiger Bridge must have identical configuration on both server nodes. When there are conflicts in the configuration of Tiger Bridge on the two nodes, the HA Nodes page of the web interface displays a warning sign  in the Tiger Bridge field of the node settings comparison table.


You can resolve these conflicts either by accessing the Tiger Bridge Configuration of one or the other node, or directly in the HA Nodes page of the web interface. When you select to resolve the conflicts in the HA Nodes page, Tiger Store automatically overwrites the Tiger Bridge configuration on the standby node with the settings of the current primary node.

**To resolve conflicting Tiger Bridge settings in the HA Nodes page:**

- 1. In the left pane of the web interface, click HA Nodes.
- 2. Next to Tiger Bridge in the node settings comparison table, click Sync.

Connected to 10.200.4.140 ( Tiger Store 2.9.0.51 )

 **NVTSERVE2016-A**  
IP: 10.200.4.140  
Serial:  
Firmware: 2.9.0.51  
[Manage Node...](#)

 **NVTSERVE2016-B**  
IP: 10.200.4.141  
Serial:  
Firmware: 2.9.0.51  
[Manage Node...](#)

Firmware Version	✓	✓
Name	✓	✓
IP Configuration	✓	✓
Admin Password	✓	✓
Date & Time	✗	✗
Domain/Workgroup	✓	✓
Email Notification Settings	✓	✓
Volumes	✓	✓
Shared Folders	✓	✓
Smart Pooling	✓	✓
Tiger Bridge	⚠	⚠

Sync

When Tiger Store overwrites the Tiger Bridge configuration on the standby node with the settings of the current primary node, the field displays the synchronized settings icon ✓.






# Manage High Availability

<i>Monitor Server Nodes Synchronization . . . . .</i>	<i>93</i>
<i>Resolve Conflicting Settings in Node View . . . . .</i>	<i>93</i>

## Manage High Availability


To be able to provide constant availability to the shared storage, the two server nodes of your Tiger Store storage server (be it an appliance with two server nodes or two computers acting as a high-availability cluster) must be online and have identical settings.

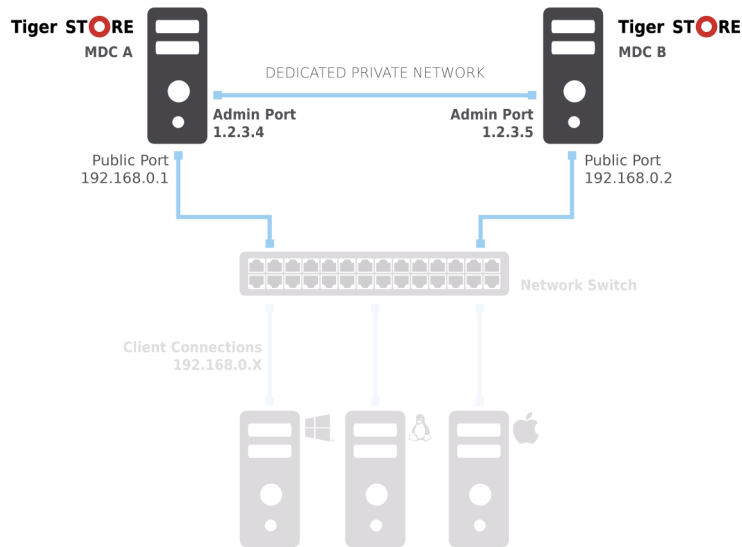

Tiger Store is designed in such a way that changes introduced in the cluster view of the web interface are automatically synchronized among the server nodes as long as both of them are online. While you can rely on the automatic synchronization of settings between server nodes for most settings, some settings (like firmware version and Tiger Store activation, for example) cannot be automatically synchronized on both server nodes. Additionally, should you add a second server node after all the settings have already been configured, you may have to synchronize the secondary node's settings manually.

# Monitor Server Nodes Synchronization

The HA Nodes page in the web interface allows you to monitor the settings synchronization among nodes.

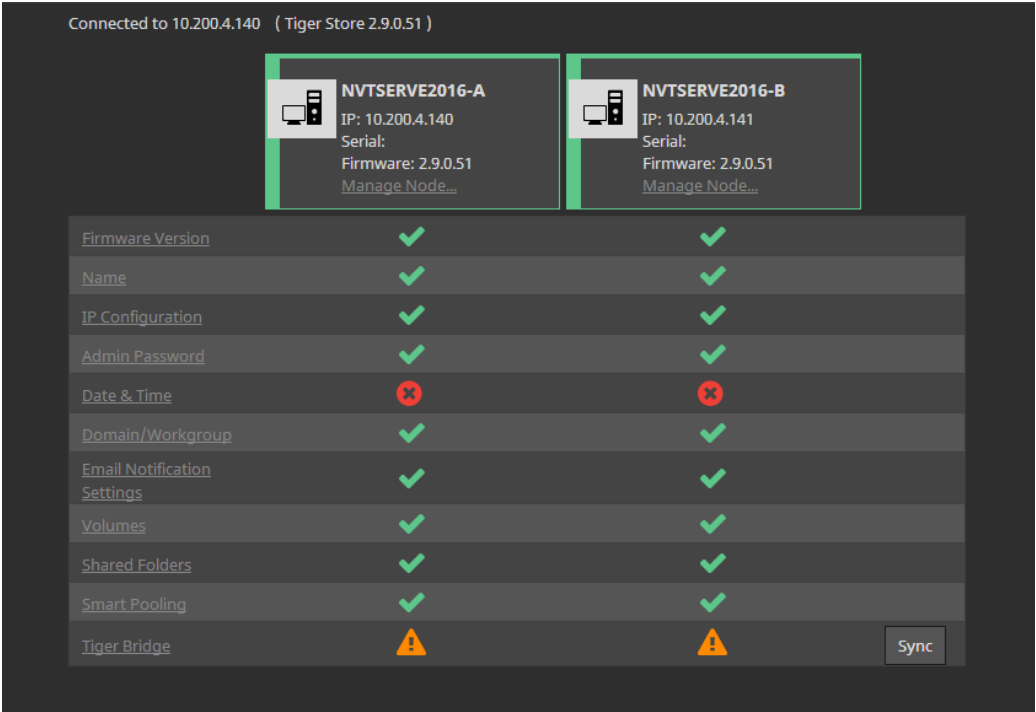

It displays the tiles of the available server nodes and a table comparing their settings:

- ✓ - settings are synchronized;
- ⚠ - conflicting settings of the two server nodes, but failover can take place;
- ✗ - critical conflict in settings, which does not allow failover to take place;

To resolve conflicting settings, you will have to access the node view of one or the other nodes and manually change the conflicting setting of the selected node.

## Resolve Conflicting Settings in Node View

**Note:** You can resolve conflicts in the configuration of Tiger Bridge, following the steps in "Tiger Bridge on a Storage Server with High Availability" on page 88.


## Manage High Availability

To apply changes on a specific server node only, you should access the node view of the web UI, which displays just the information valid for the node, but not for the cluster. The purpose of the node view is to allow you to resolve conflicts in those settings of the two nodes that cannot be synchronized automatically in cluster view (like Tiger Store activation, firmware version, etc.).

**Important:** *When accessing the node view of the web interface, make sure you don't introduce changes that may lead to conflicts between the two server nodes.*

### To access the node view of the web UI:

1. In the left pane of the web interface, click HA Nodes.
2. In the tile of the server node, whose web UI you want to access, click Manage Node.

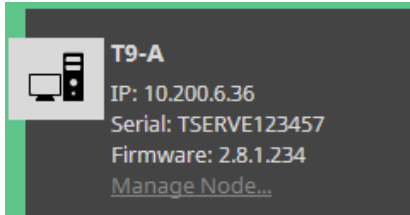

The node view for the selected server node opens in a new tab/window of your web browser.

3. Click Manage and then enter the password for the web interface.

**Tip:** *If you have changed the password for the cluster view of the web interface, while this node has been online - enter the new password. In other cases enter the default password - admin.*



# System Maintenance

<i>Tiger Store Reboot Options . . . . .</i>	<i>96</i>
<i>Enable/Disable Remote Access to the Appliance . . . . .</i>	<i>97</i>
<i>Firmware Update of the Appliance . . . . .</i>	<i>98</i>
<i>Back Up/Restore the Tiger Store Configuration . . . . .</i>	<i>101</i>
<i>Configure E-mail Notifications . . . . .</i>	<i>103</i>
<i>View Event Reports . . . . .</i>	<i>104</i>

## System Maintenance

The following options facilitate you in maintaining and monitoring the Tiger Store system:

- Tiger Store reboot options.
- enabling remote access to a Tiger Store appliance.
- Tiger Store appliance firmware update.
- backing up and restoring the Tiger Store configuration of an appliance.
- e-mail notifications for problems.
- viewing events reports.

## Tiger Store Reboot Options

To facilitate you in performing certain tasks and in order not to obstruct users work with the appliance, Tiger Store offers you several reboot options.

You can issue the following commands:

- Restart add-on services - restarts all add-on services, installed on the storage server (like auto defragmentation, Tiger Bridge, etc.).
- Restart all services - restarts all Tiger Store services and starts them in the correct order, clients are disconnected from the storage server.
- Full System reboot - Tiger Store automatically disconnects any connected client computer and shuts down, then starts again. Once the system is up again, the web interface is automatically refreshed.

**Note:** *After restarting the appliance, client computers are not automatically reconnected to it.*

- Shutdown - Tiger Store automatically disconnects any connected client computer from the storage server and shuts it down.


**Note:** *On Tiger Store with high-availability add-on activated, when the respective reboot option is issued in cluster view of the web interface, it applies to both server nodes, and when you issue the command in node view, it applies to the selected server node only.*

Whenever you need to restart or shut down a Tiger Store appliance, it is advisable to do it from the web interface, instead of pressing the Power or Reset buttons on the back of the appliance.

**Important:** *Some of the Shut down and Reboot commands are not available when maintenance operations such as Firmware Update are going on at the moment.*

**To issue a reboot option command:**

1. In the left pane of the web interface, click System and then Maintenance.
2. In System Reset, select the desired option in the drop down box and then click the button below to issue the selected command.

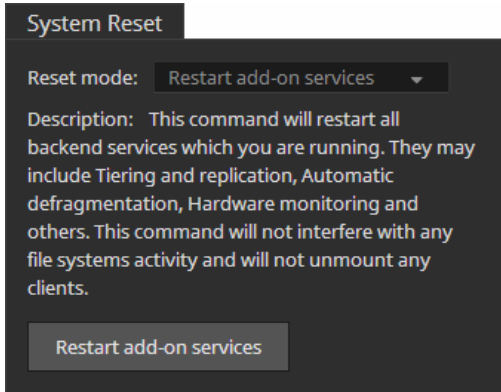

**Tip:** The button below the drop down box changes according to the selected command.


## Enable/Disable Remote Access to the Appliance

For some maintenance operations you may need the assistance of the Tiger Technology support team. To facilitate them in diagnosing the problem and resolving it, you may have to provide remote access to the appliance. This is done by enabling the pre-installed software for remote assistance.

Enable remote access to the appliance only if requested by Tiger Technology support team. Disable the setting once remote support is no longer needed.

**To disable/enable remote access to the appliance:**


1. In the left pane of the web interface, click System and then About.
2. Do one of the following:
  - Select the “Allow remote assistance” check box, to enable remote access to the appliance.

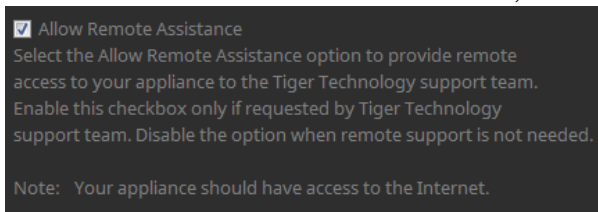

## System Maintenance

**Note:** Remember to disable this option once your remote session with Tiger Technology support finishes.

- Clear the “Allow remote assistance” check box, to disable remote access to the appliance.

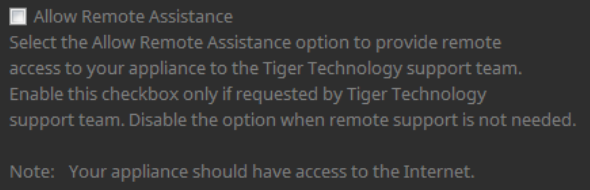

## Firmware Update of the Appliance

You can use the web interface of Tiger Store to update the appliance firmware. You can check the current firmware version in the About page of the web interface.

**Note:** On appliances with two server nodes, you should check the current firmware version of each node in Node view.

Once you receive a firmware update, it is advisable to upload it on your appliance to guarantee its good functionality. The procedures for performing a firmware update on your appliance differ depending on whether it features two server nodes or just one. Both server nodes should run the same firmware version in order to act as a high-availability cluster.


Some firmware updates require that the Tiger Client software also be updated on client computers.

You can update the firmware, when no client computer is connected to the appliance and no other maintenance operation is going on at the moment. That is why before updating the firmware you should enter Maintenance mode, which disconnects all client computers.

### To upload a firmware update on an appliance with one server node:


**Important:** The process of firmware update cannot be interrupted or paused. Do not shut down or restart the appliance after a firmware update has begun.

1. In the left pane of the web interface, click System and then Maintenance.
2. Click Enter Maintenance mode and then confirm that you want to enter Maintenance mode.

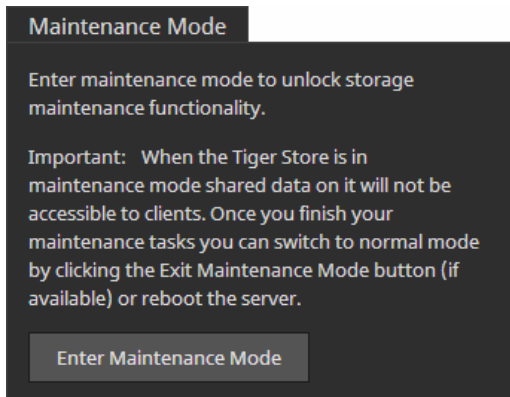

**Important:** All connected Tiger Clients will be automatically disconnected from the shared volumes and any file operation going on at the moment will be canceled.


3. In Firmware Update, click Browse/Choose File and then browse for and select the file containing the firmware update to upload.

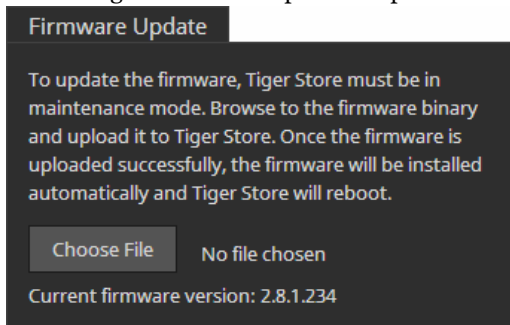

4. Click Continue to confirm that you want to perform firmware update.  
Tiger Store uploads the firmware on the system hard drive, unpacks it and applies the firmware update. When the firmware update finishes, the system automatically restarts.


## To upload a firmware update on an appliance with two server nodes:

1. In the left pane of the web interface, click System and then Maintenance.
2. Click Enter Maintenance mode and then confirm that you want to enter Maintenance mode.

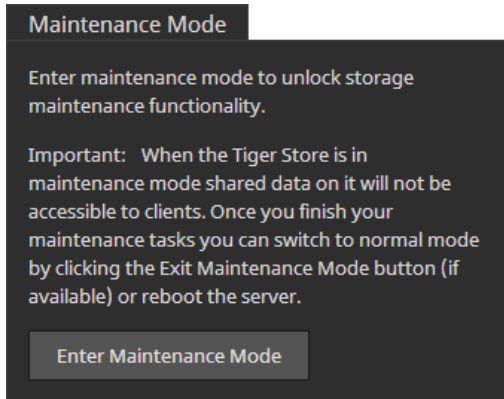


**Important:** *All connected Tiger Clients will be automatically disconnected from the shared volumes and any file operation going on at the moment will be canceled.*

3. In the left pane, go to HA Nodes and in the tile of each server node, click Manage Node.  
The node view of each server node opens in a new tab/window of your web browser.
4. In the node view of the first server node, go to System | Maintenance.
5. In Firmware Update, click Browse/Choose file and then browse for and select the file containing the firmware update to upload.

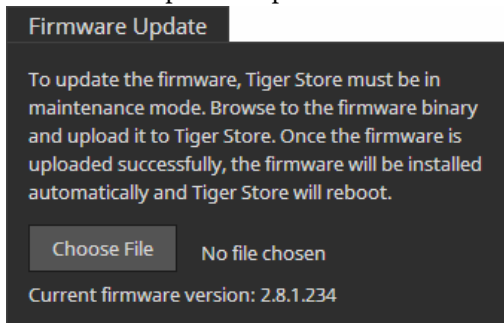

6. Click Continue to confirm that you want to perform firmware update.
7. In the node view of the second server node, go to System | Maintenance.

8. In Firmware Update, click Browse/Choose file and then browse for and select the file containing the firmware update to upload.

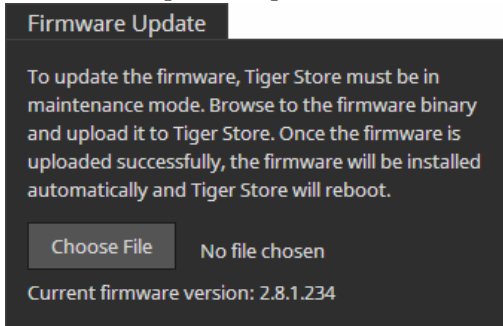

9. Click Continue to confirm that you want to perform firmware update.  
When the firmware update finishes, both server nodes automatically restart.

## Back Up/Restore the Tiger Store Configuration

To facilitate you when upgrading your Tiger Store appliance, Tiger Store allows you to back up and then restore all settings configured in the web interface, thus sparing you the effort to configure them again. When you restore a previously backed up configuration, you restore all settings for appliance name, shared, offline and private volumes (identified by volume GUID), default volume mount point on Windows Tiger Clients, auto-defragmentation, smart storage pooling, domain settings, Tiger Bridge settings, IP configuration, except the names of the volumes seen by the storage server.

**Note:** *Tiger Store doesn't back up and restore the password for the web interface, but keeps the last used password.*


On Tiger Store appliances with high-availability add-on activated, to ensure the consistency of the backup file, Tiger Store allows you to back up and restore the settings configuration only if both server nodes are online. This way, when you restore a backed up configuration, there's no need to restore it on each node - Tiger Store takes care to restore and synchronize the settings on both nodes.

By default, the file with the backed up configuration is saved with the following name: [storage server name]\_[time]\_[date]\_backup.json. You can create as many backups as you want and change their name to make it easier for you to discern between one another as long as you keep their extension (.json). To provide protection of sensitive information in the configuration backup file, Tiger Store encrypts it. Additionally, you can ensure that no unauthorized user restores a backed up configuration file by protecting the backup file with a password.

**Important:** Restoring a backed up settings configuration automatically disconnects all Tiger Clients and restarts the storage server computer.

### To back up the Tiger Store settings configuration:


1. In the left pane of the web interface, click System and then Maintenance.
2. In Back Up System Settings, click Back Up.

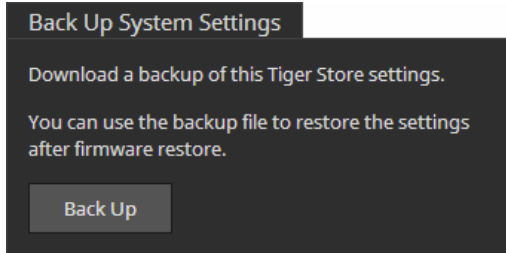

3. Do one of the following:
  - Leave the password field empty and click OK, to be able to restore the settings configuration without providing password.
  - Enter a password and click OK, to allow restoring the settings configuration only after providing a password.
4. Select the location where to save the file and click Save.

### To restore a Tiger Store settings configuration:

1. In the left pane of the web interface, click System and then Maintenance.
2. In Restore System Settings, click Choose File.

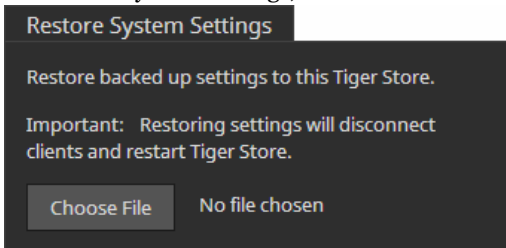

3. Select the file and click Open.
4. Do one of the following:
  - Leave the password field empty and click OK, to restore a settings configuration, which isn't password protected.
  - Enter a password and click OK, to restore a settings configuration protected with a password.

5. Tiger Store automatically disconnects all Tiger Clients and after importing the selected backup file restarts.


## Configure E-mail Notifications

Tiger Store offers you the opportunity to receive e-mail notifications each time there's a problem with the shared volumes. The notifications give you detailed information about the storage status and the exact disk that has failed. To benefit from the e-mail notifications, besides specifying the e-mail account(s) to which the notifications to be sent, you must also specify an e-mail account from which these notifications to be sent. This account must be managed by a mail server to which Tiger Store is connected via the Public port or another Ethernet port. It is advisable to let the system administrator set the notification settings as you will also need the password, SMTP host, SMTP port, SSL and authentication type details of the account from which the notifications will be send. Your system administrator can create a new e-mail account specifically for the purposes of sending e-mail notifications from Tiger Store.

You can enable/disable e-mail notifications at any time, keeping in mind that each time you disable them, you lose all e-mail notification settings you have specified.

### To enable/disable e-mail notifications:

1. In the left pane of the web interface, click Settings.
2. In E-mail Notification, do one of the following:

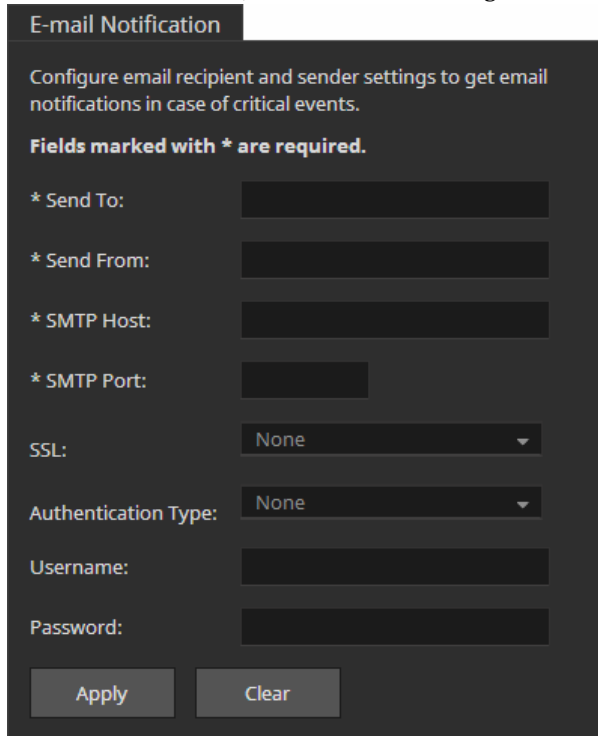

The screenshot shows a web interface for 'E-mail Notification' settings. At the top, there's a title 'E-mail Notification' in a dark box. Below it, a subtitle reads 'Configure email recipient and sender settings to get email notifications in case of critical events.' A note states 'Fields marked with \* are required.' The form contains several fields: '\* Send To:', '\* Send From:', '\* SMTP Host:', '\* SMTP Port:', 'SSL:' (with a dropdown menu showing 'None'), 'Authentication Type:' (with a dropdown menu showing 'None'), 'Username:', and 'Password:'. At the bottom, there are two buttons: 'Apply' and 'Clear'.

- To enable e-mail notifications or edit the e-mail notifications settings, enter the needed information in the respective fields and click Apply.

**Note:** In case you want to set more than one e-mail account to receive notifications, in the Send To field enter the respective e-mail accounts separated by commas.

**Tip:** To verify that you have correctly specified the e-mail notification settings, click Send Test Message and check the Inbox of the e-mail account for the test message.

- To disable e-mail notifications, click Clear and then Apply.

## View Event Reports

In the web interface you can view detailed reports about events regarding the shared volumes, a Tiger Client or all Tiger Clients within a selected time period. You can filter the events by three categories - informations, warning and errors.


**Note:** You can generate Event reports, only if you are currently connected to the storage server for which you generate the report.

### To generate an event report:

1. In the left pane of the web interface, click Events.

**Tip:** On Tiger Store with high-availability add-on activated, to view events report for a specific server node only, open its node view in the web UI.

The Events page appears.

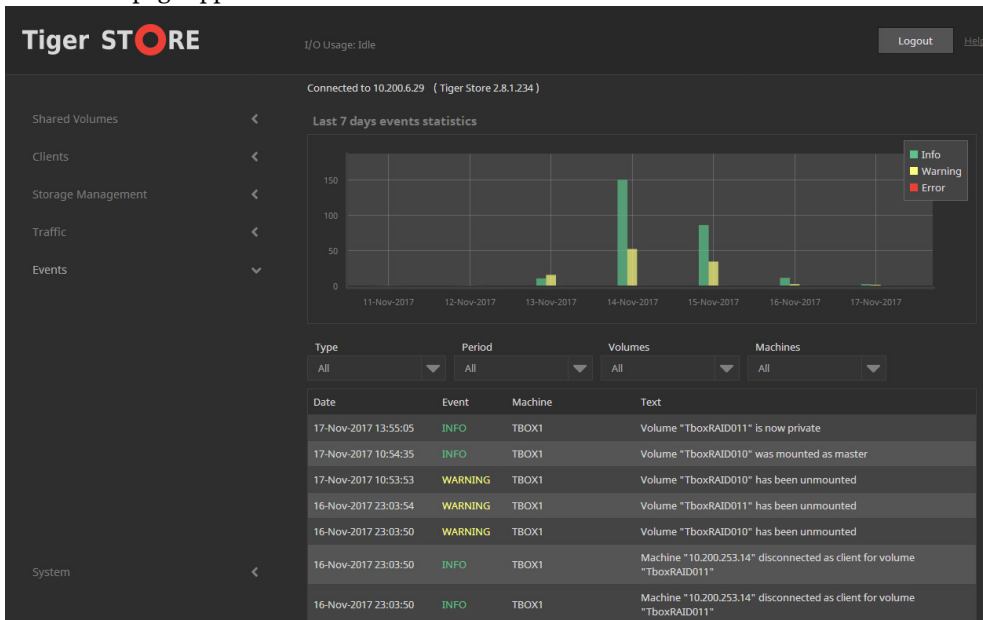

2. In the Type drop-down box, select whether to generate a report about all events or filter it to specific type only.
3. In the Period drop-down box, select the time period for which to generate the report.
4. In the Volumes drop-down box, select whether to generate report for a selected volume only or for all volumes.
5. In the Machines drop-down box, select whether to generate a report about all machines or filter it to a specific computer only.

The Events page displays graphs with the event types by date and below lists all events in descending order.



# index

## A

### access

- node view 94
- Tiger Bridge Configuration 81
- Tiger Bridge Tape Management 83
- Tiger Store web interface 21
- web interface from network computers 22

### activate

- Tiger Store 23

### activation

- view status 24

### activation status

- view 24

### assign

- IP address to network port 30

### auto-defragmentation

- disabling 67
- enabling 67

## B

### back up

- settings configuration 101

## C

### check

- volume file system 67

### clean

- disk 55

### cluster view 12

### create

- new basic GPT volume 57
- new RAID 60
- new striped GPT volume 58
- new volume 53, 55

smart storage pool 38

SMB/CIFS share 69

## D

### data

- manage in the Volume Browser 84

### data ambiguity

- in storage pool 41
- resolve in storage pool 42

### data distribution

- in storage pool 39

### date and time

- set 34

### deactivate

- Tiger Store 27

### defragment

- manually volume 68

### defragmentation 67

### disable

- auto-defragmentation 67
- remote access to Tiger Store 97

### disconnect

- selected Tiger Client 73, 74

### disk

- cleaning 55
- view details 48

### domain environment

- set 35

### download

- Tiger Bridge Configuration 80
- Tiger Bridge Tape Management 82

### dynamic disks

- import 64
- manage 64

reactivate 65

## E

e-mail notifications

enable 104

enable

auto-defragmentation 67

e-mail notifications 104

remote access to Tiger Store 97

events

view report 104

## F

failover 11

firmware

update 98

## I

import

dynamic disks 64

RAID 63

install

Tiger Bridge Configuration 80

Tiger Bridge Tape Management 82

installing

Tiger Store Server software 18

IP address

assign to network port 30

## L

LAN client 11

## M

manage

dynamic disks 64

## N

name

change appliance's name 33

network environment

set 35

network port

assign IP address 30

teaming 29

node view 12

accessing in web interface 94

## O

offline

make volume offline 51

offline volume 12

## P

password

change 23

permissions

set to SMB/CIFS share 70

pool

shared volumes 38

primary node 11

private

make a volume private 50

private volume 12

## R

RAID

create 60

import 63

re-build 62

reactivate

dynamic disks 65

reboot commands 97

re-build

RAID 62

remote access

disabling 97

enabling 97

remove

SMB/CIFS share 70

rename

Tiger appliance 33

volume 65

repair

volume file system 67

replication

re-scanning data 87

requirements

volume 15

re-scan

replicated data 87

restore

settings configuration 101

## S

SAN Client 11

secondary node 11

set

- data distribution policy in pool 40
- date and time of the appliance 34
- default mount location 52
- domain environment 35
- mount location to a volume 51
- network environment 35
- permissions to SMB/CIFS share 70
- workgroup environment 36

settings configuration

- back up 101
- restore 101

share

- volume as a SMB/CIFS 69
- volume to Tiger Clients 50

shared volume 12

- view details 47

smart storage pool

- create 38
- data distribution 39

smart storage pooling

- data ambiguity 41
- data distribution policy 40
- resolve data ambiguity 42

SMB/CIFS share

- remove 70
- set permissions 70

storage server 11

system requirements

- Tiger Store server 13

## T

team

- network ports 29

Tiger appliance

- change name 33
- configure identification settings 29
- rename 33
- update firmware 98

Tiger Box volume

- create new RAID 60

Tiger Bridge

- high availability 88
- resolve conflicting settings 88

Tiger Bridge Configuration

access 81

download and install 80

Tiger Bridge Tape Management

- access 83
- download and install 82

Tiger Client 11

- disconnect selected 73, 74

Tiger Store

- activation 23
- deactivate 27
- reboot commands 97
- uninstall 27
- view activation status 24

Tiger Store server

- system requirements 13

Tiger Store Server software

- installing 18

traffic

- view information 76

## U

uninstall

- Tiger Store 27

unshare volume 50

update

- Tiger appliance firmware 98

## V

view

- activation status 24
- details about all volumes 47
- details about disks 48
- events report 104
- shared volume details 47
- traffic information 76

volume

- check and repair 67
- create basic GPT 57
- create new 53, 55
- create new striped GPT 58
- defragmentation 67
- import RAID 63
- make offline 51
- make private 50
- manually defragment 68
- offline 12
- pool 38

## Index

- private 12
- re-build RAID 62
- rename 65
- requirements 15
- set default mount location 52
- set mount location 51
- share as SMB/CIFS 69
- share to Tiger Clients 50
- shared 12
- unshare 50
- view details 47
- Volume Browser
  - manage data 84
- W
- web interface
  - access from computers on the network 22
  - access node view 94
  - accessing 21
  - set new password 23
- web UI
  - cluster view 12
  - node view 12
- workgroup environment
  - set 36